












Kolpa·san®

by KOLPA










NAVODILO ZA SESTAVO TUŠ KABIN UPUTSTVO ZA MONTAŽU TUŠ KABINA

TKP PULSAR 90 x 90, 100 x 100

TKP 90x90	885 - 895	2000	570
TKP 100x100	985 - 995	2000	570

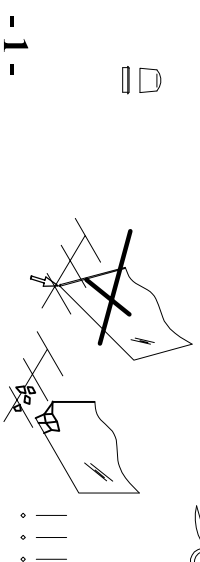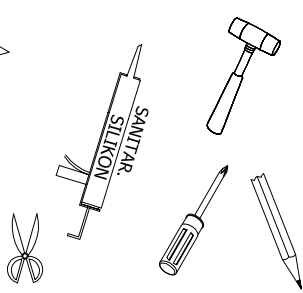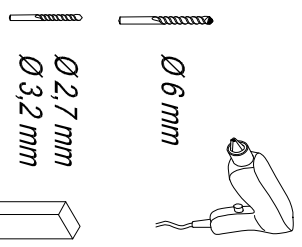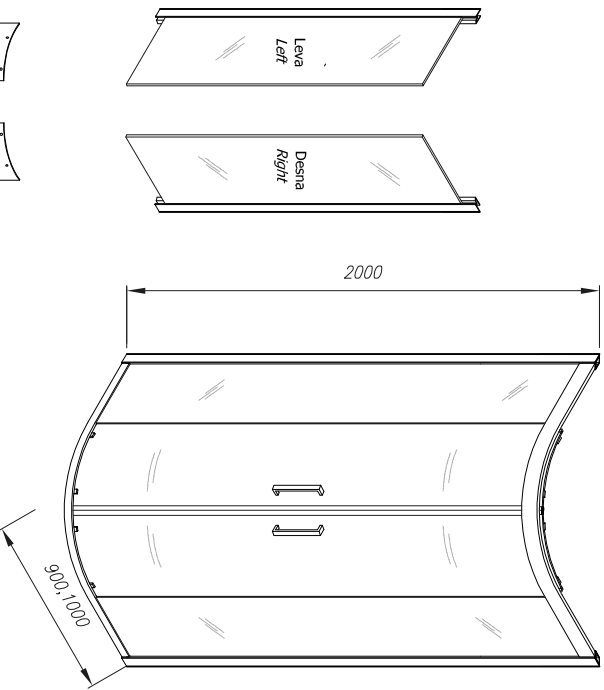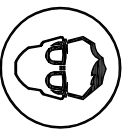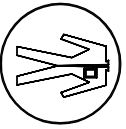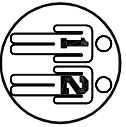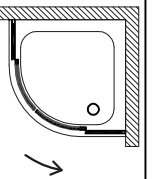

-2-

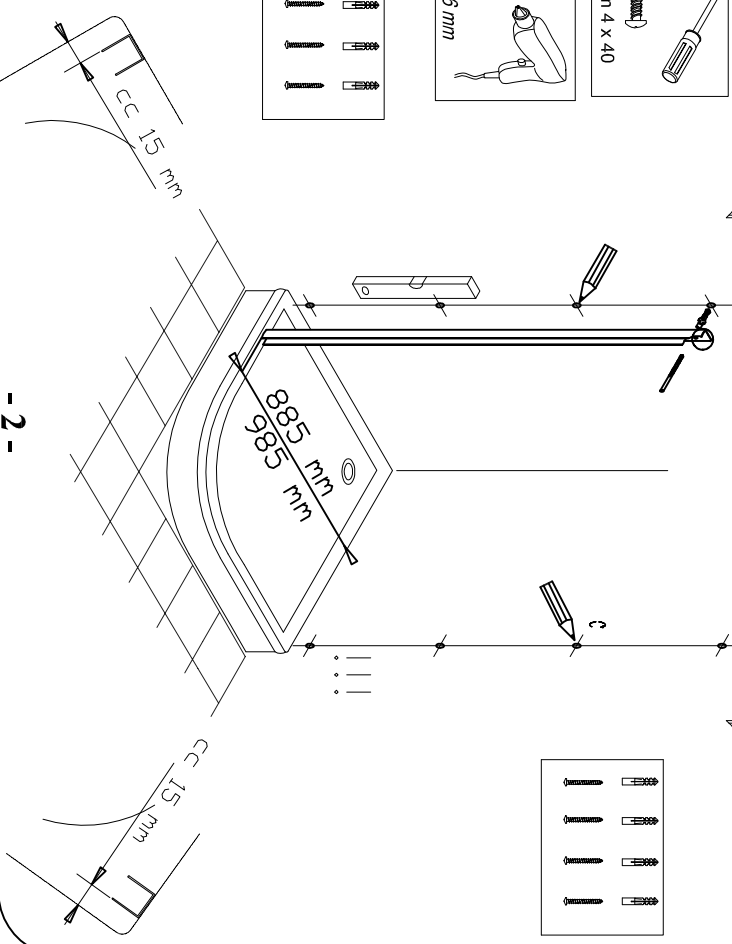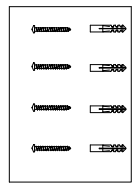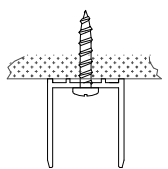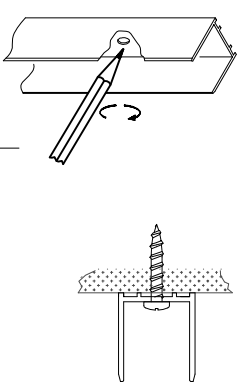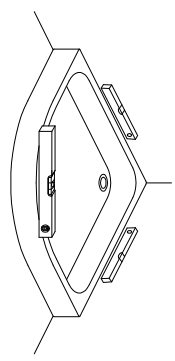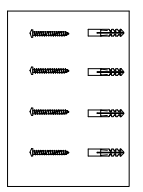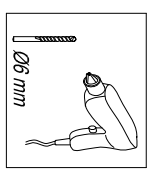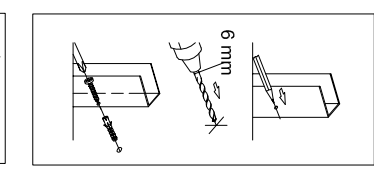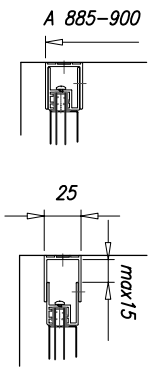


IDENT 000

-1-


-2-

-b-

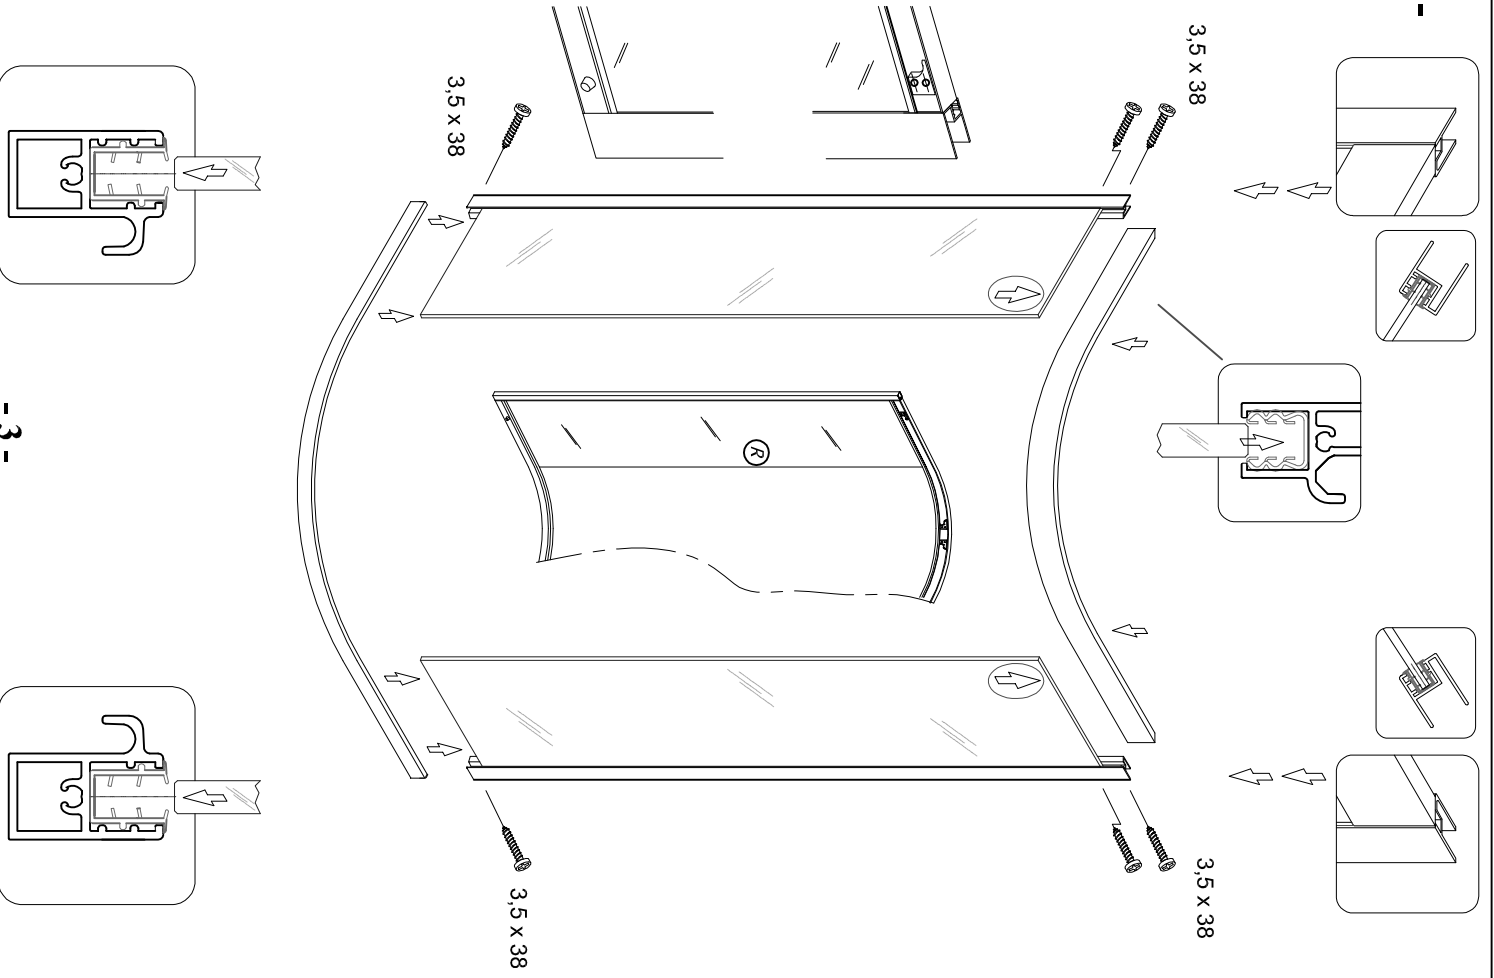


-3-

-c-

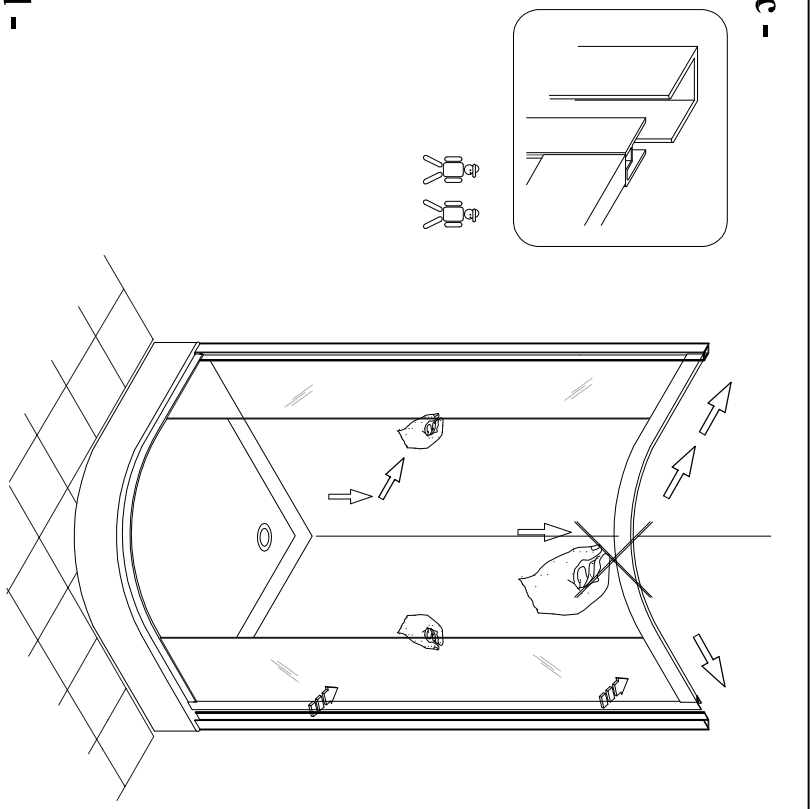


-d-

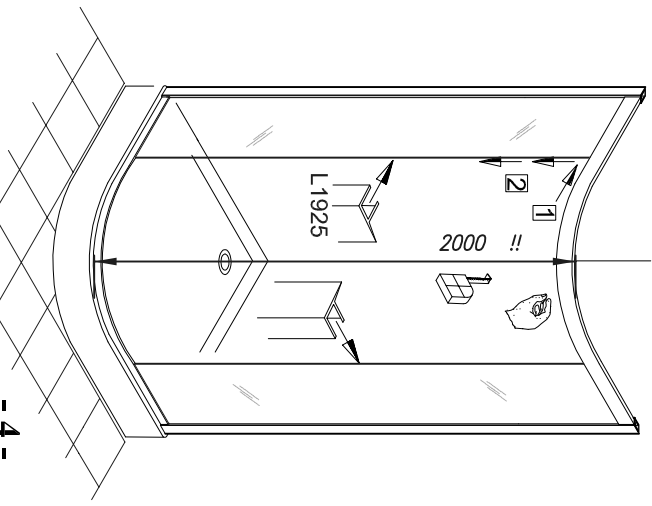

-4-


-e-



-5-

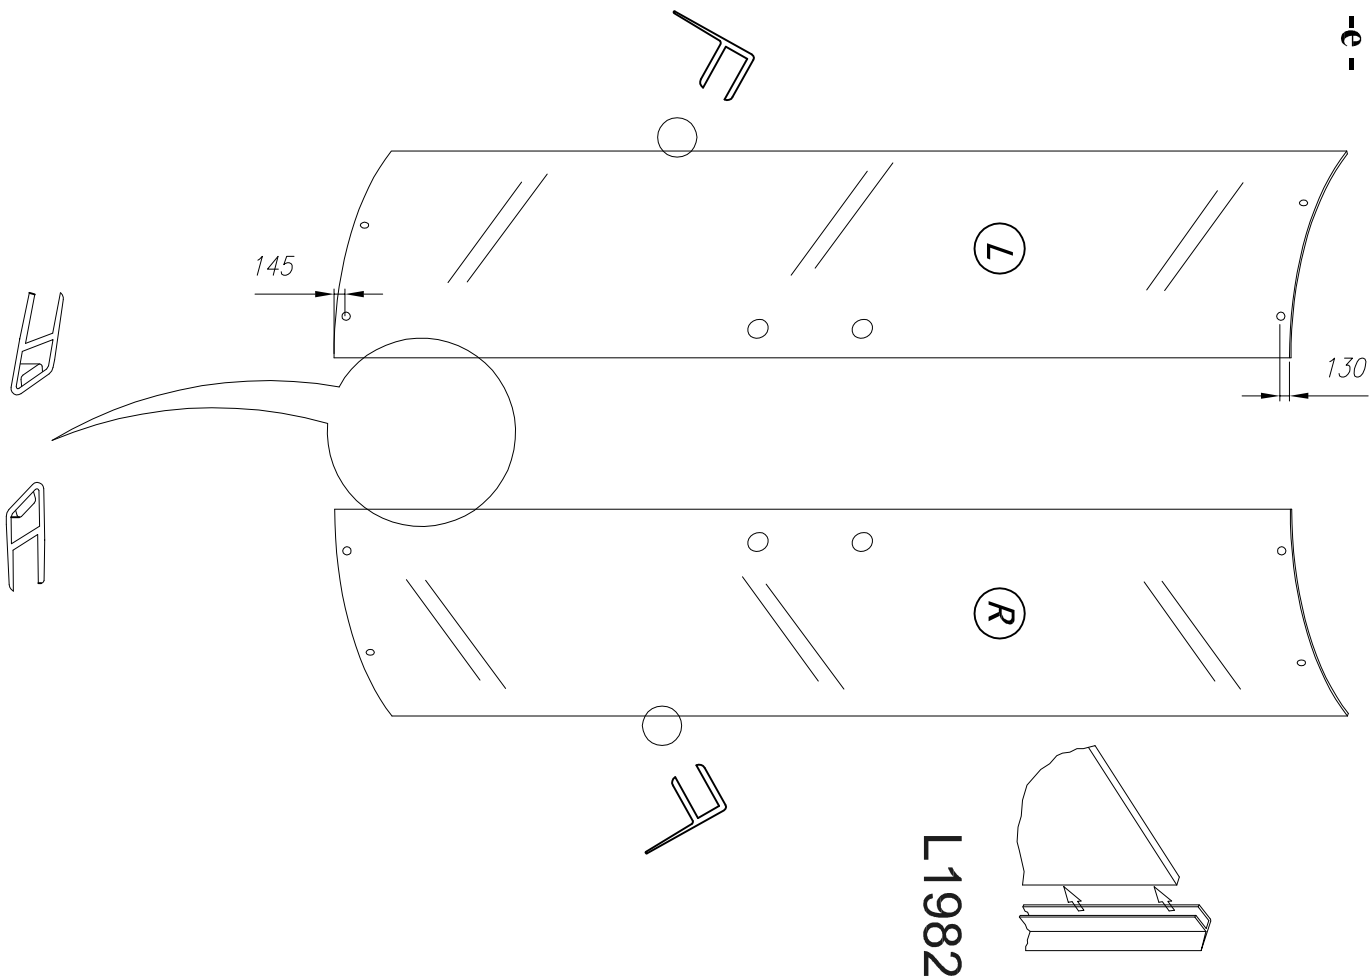








-f-

-6-

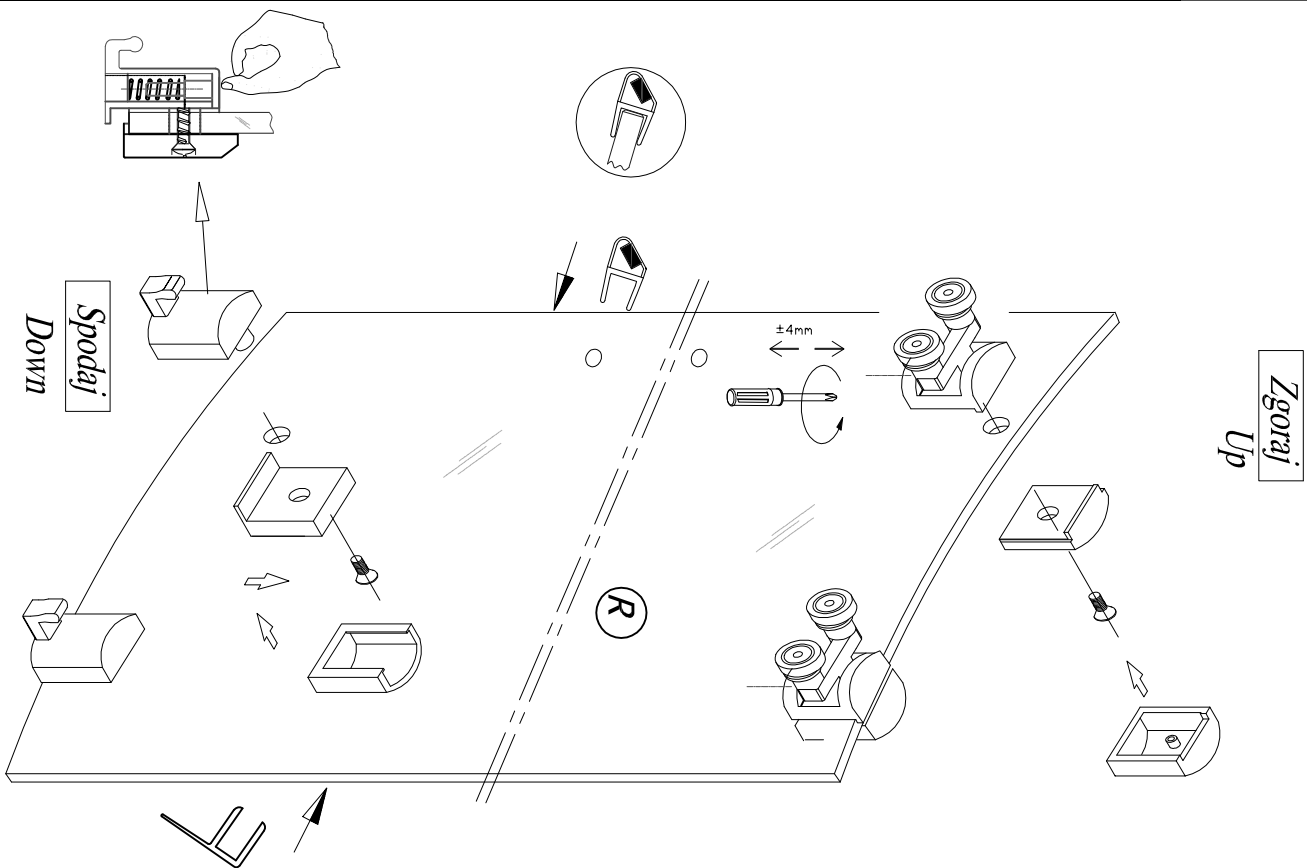

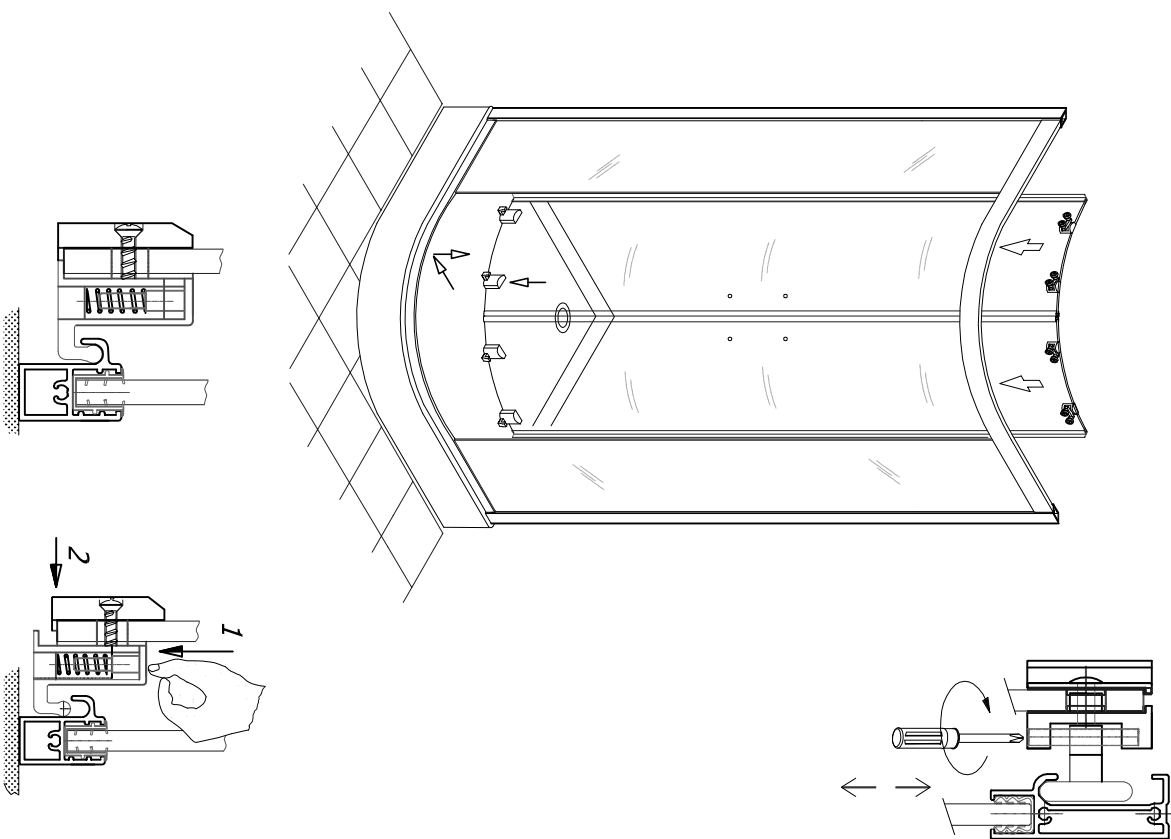
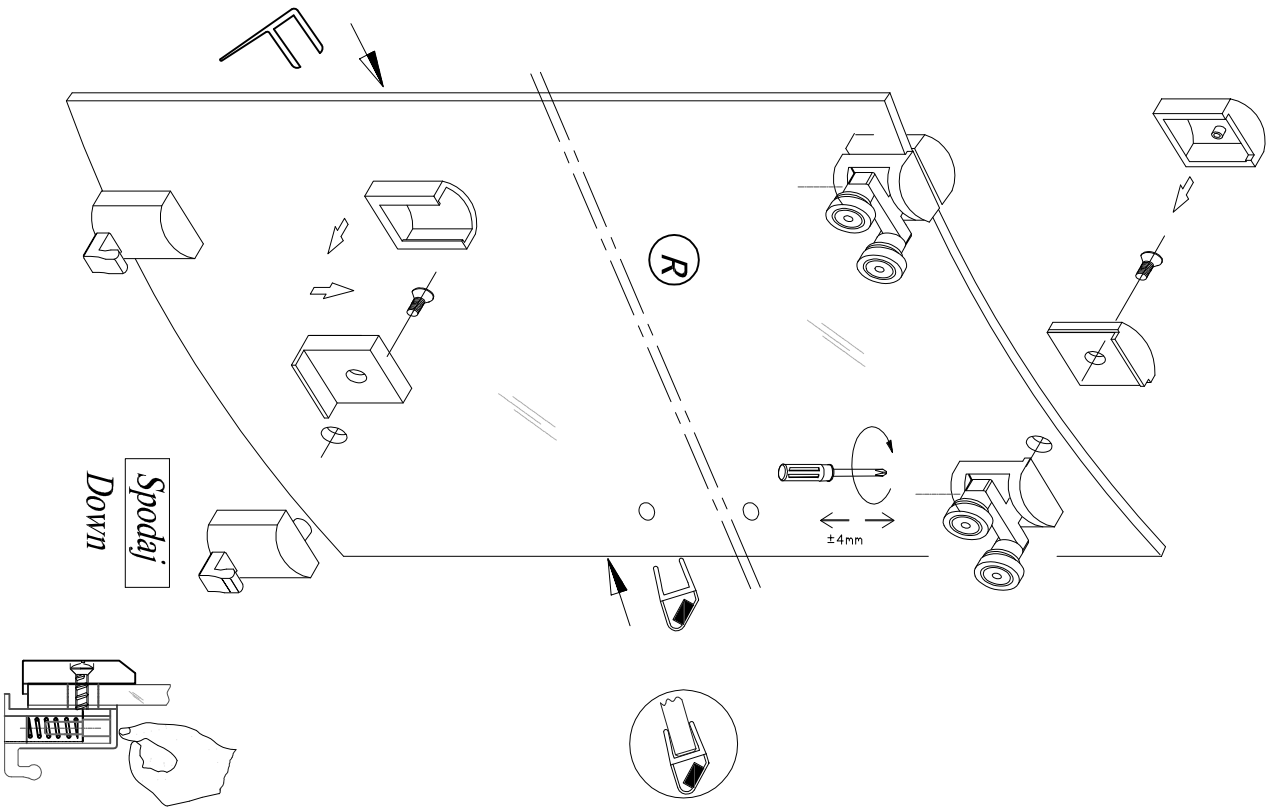


-i-

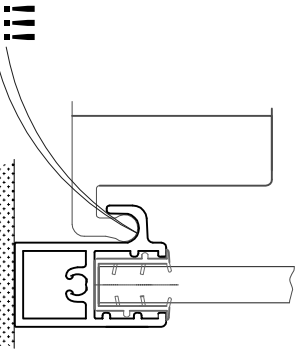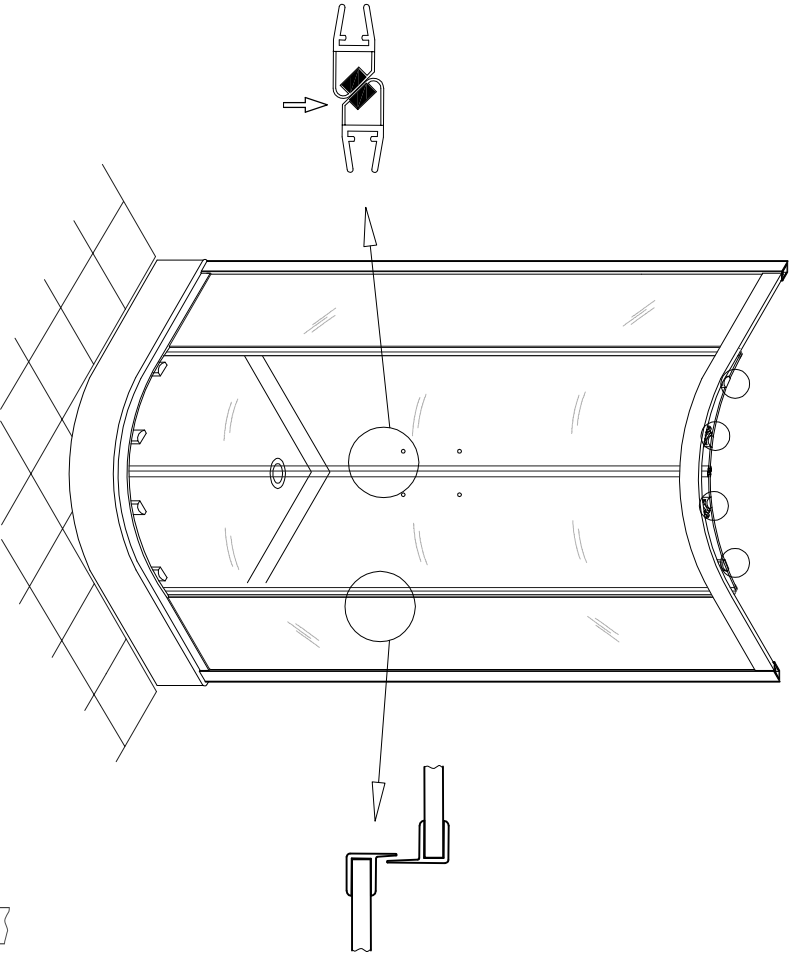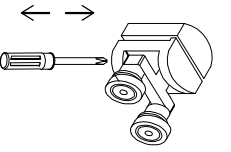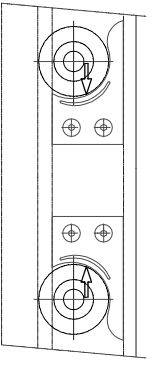

-9-

-j-

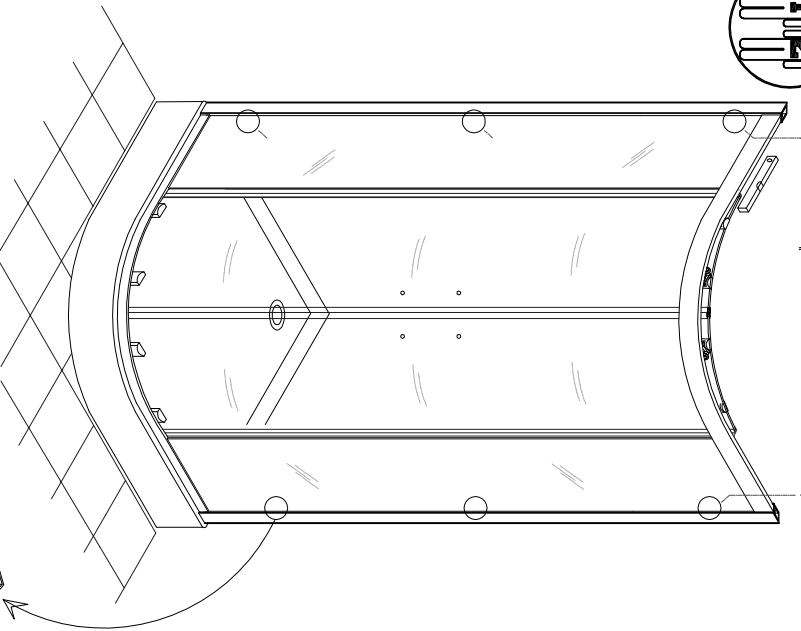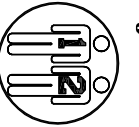



iii

x =
min 15


cc 80 mm

Ø 3,5






6 kom 3,9 x 13

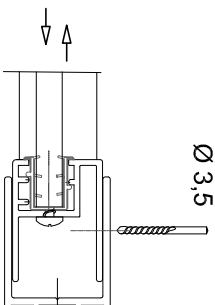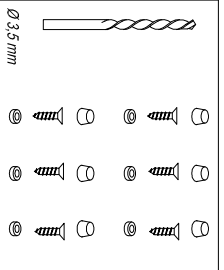

-10-


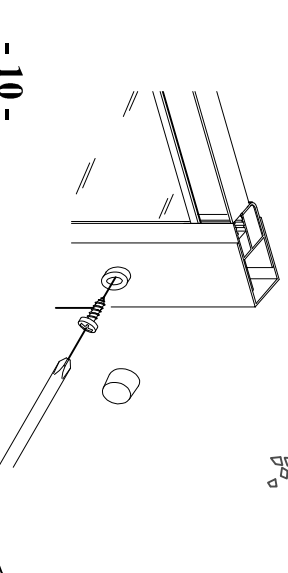


-k-

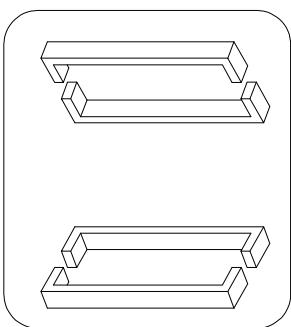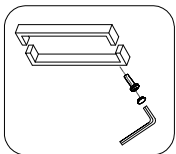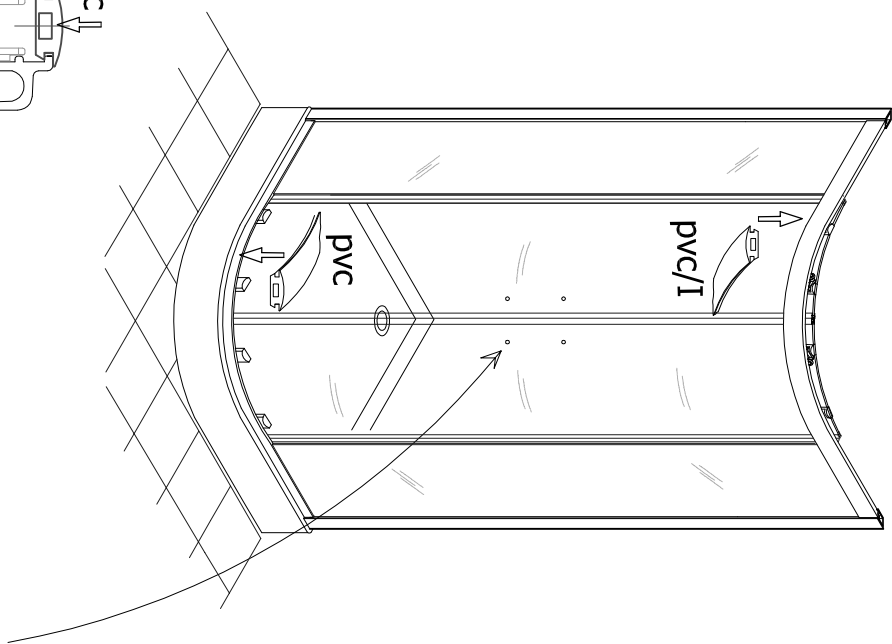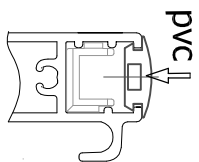


-11-

-1-

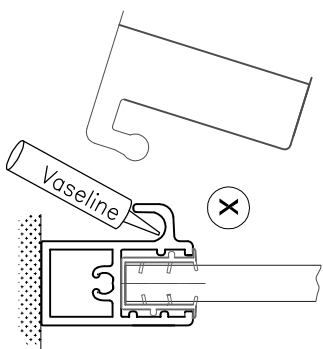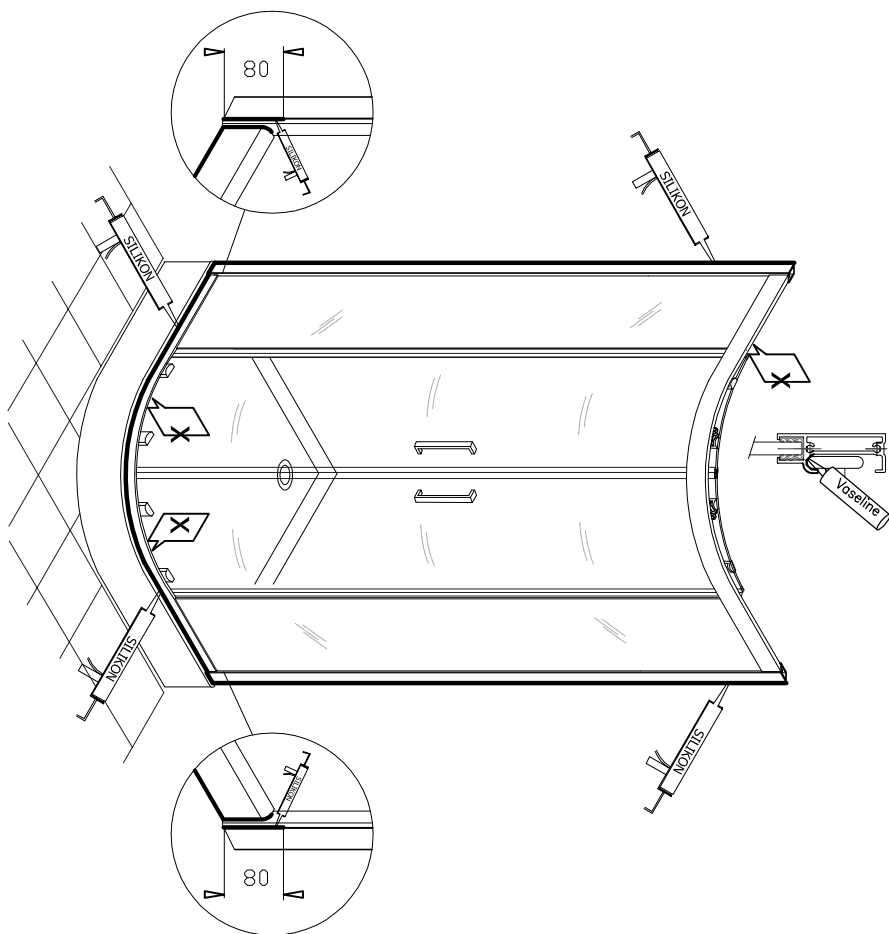

24 h

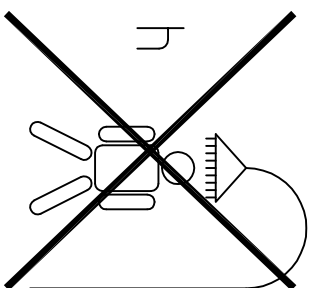

-12-