


armal


BE INSPIRED

armal.hr

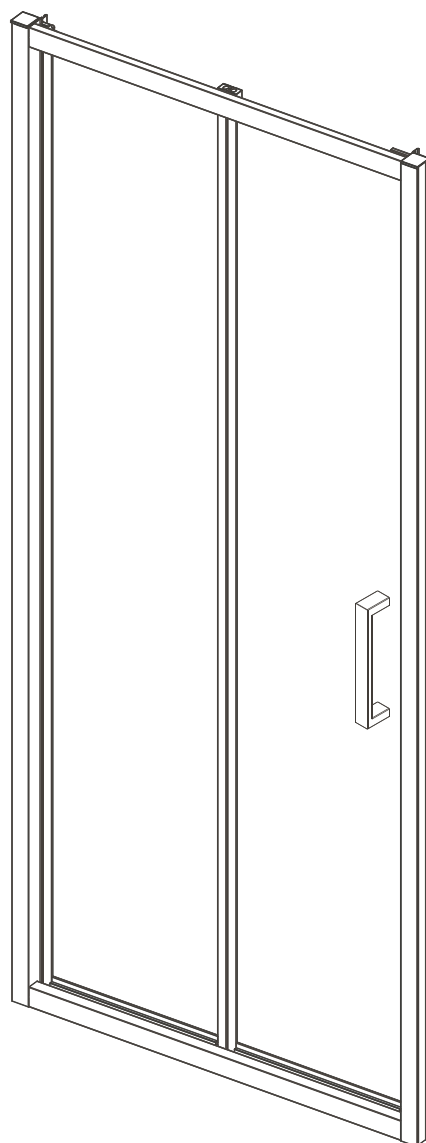


K689B/K689BB 800x1900mm
K689C/K689CB 900x1900mm

Nord Produkt d.o.o. | Bobovica 8a | 10430 Samobor | Hrvatska




[01]ex1




[04]x2



[09]x1



[14]ax1




[14]bx1



[15]x2




[16]x6



[17]x6




[19]x3



(St4x10mm)

[21]x6




(St4x30mm)

[24]x6

Morat ćete sastaviti svoj proizvod (alati nisu priloženi)

Izdelek boste morali sestaviti (orodja niso priložena)

You will need to assemble your product (tools not provided)

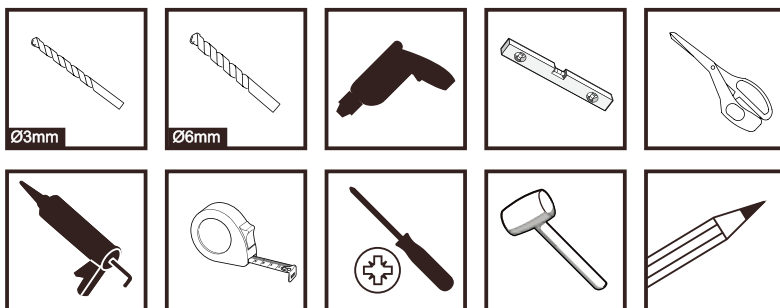


01


Montaža
Montaža
Assembly




[04]x2

	X
800mm	775-815mm
900mm	875-915mm

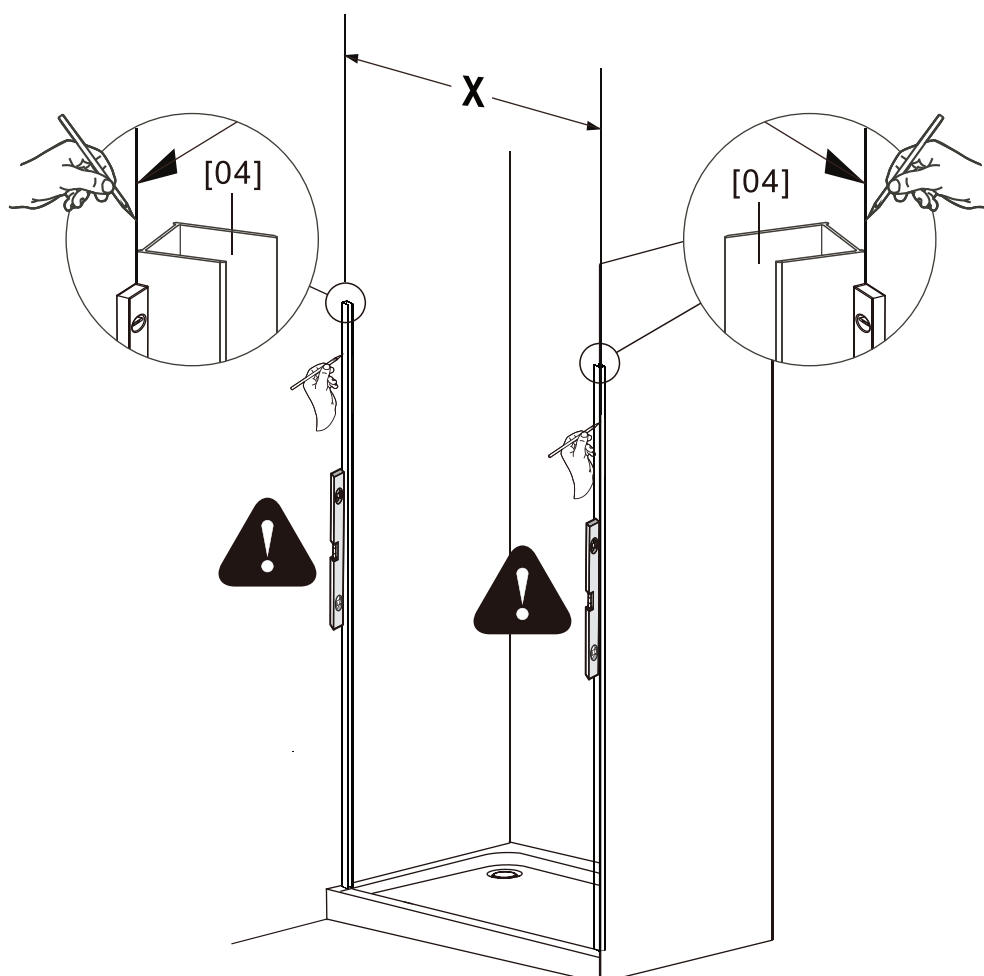


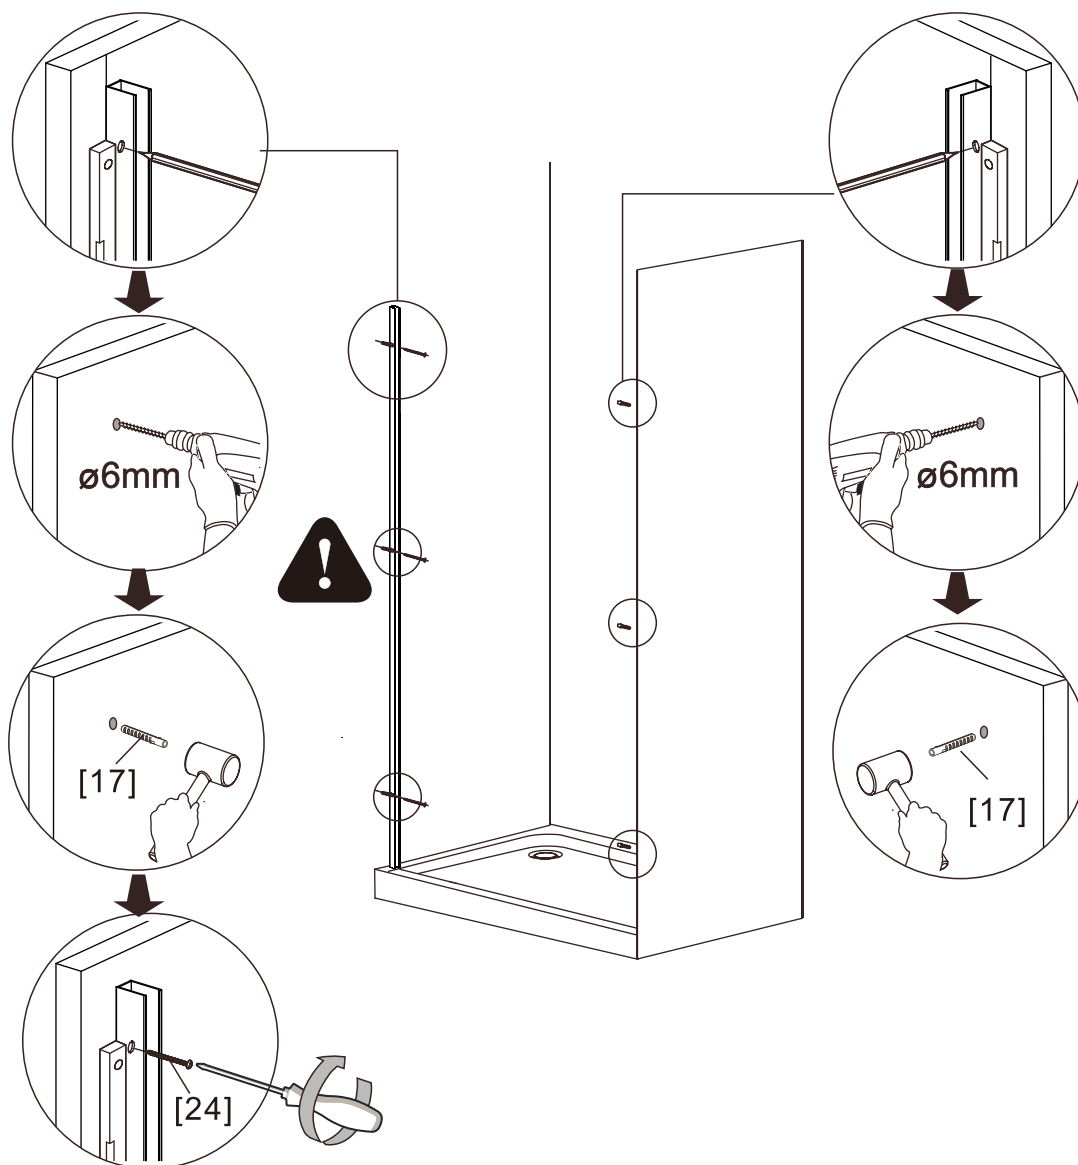


02



[04]x1




[17]x6



(St4x30mm)

[24]x3



03



[01]ex1




[04]x1

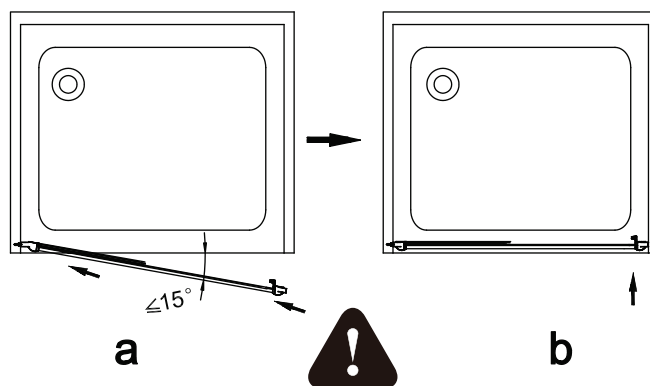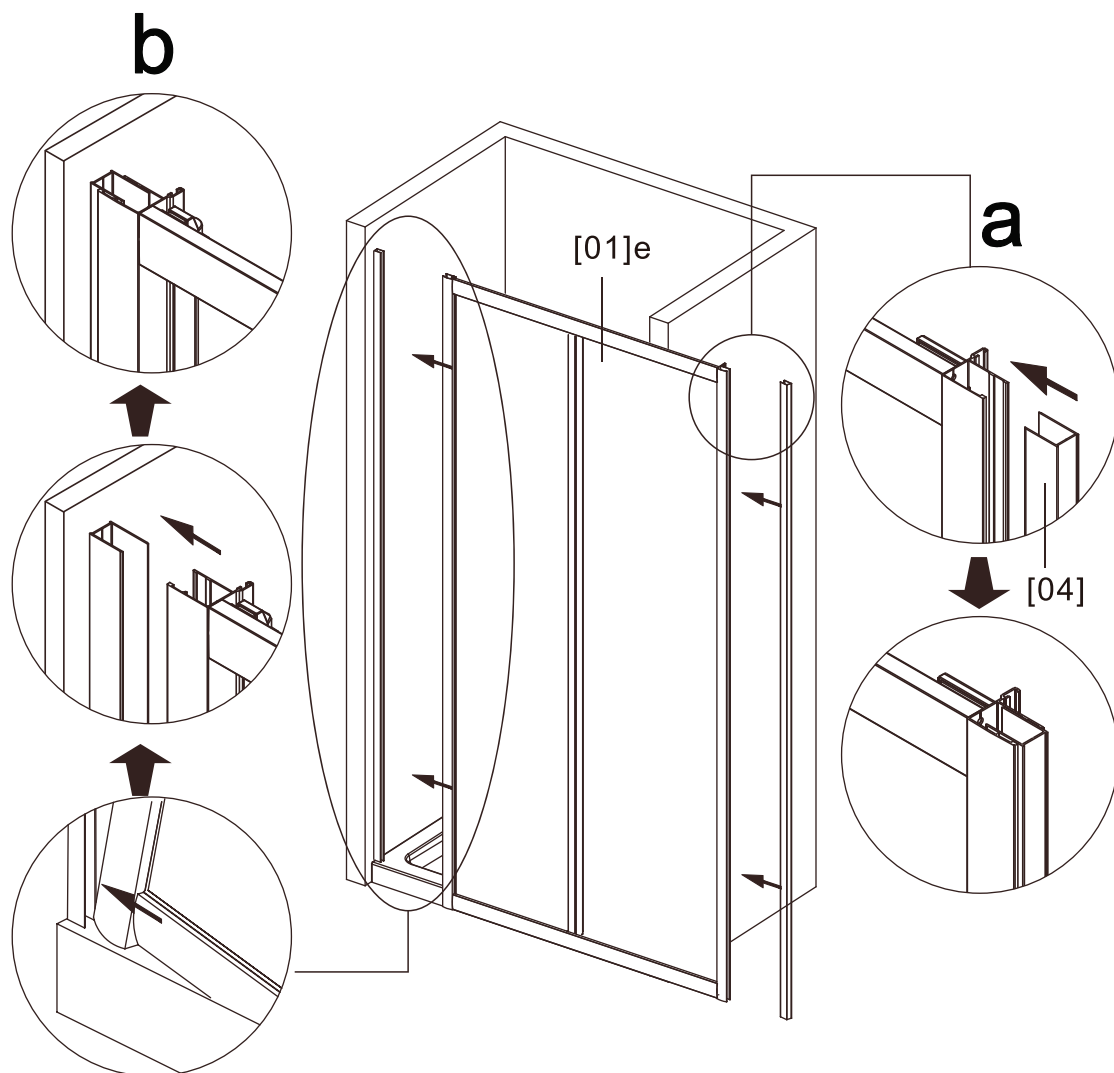

Napomena: Provjerite jesu li strane staklenih ploča s premazom Aquashield postavljene okrenute prema unutra
Opomba: Preprijčajte se, da so stranice staklenih plošč z obdelavo Aquashield obrnjene navznoter.
Note: Ensure that the sides of the glass panels with the Aqua shield treatment on, are positioned facing inward

04







(St4x30mm)

[24]x3



[19]x3

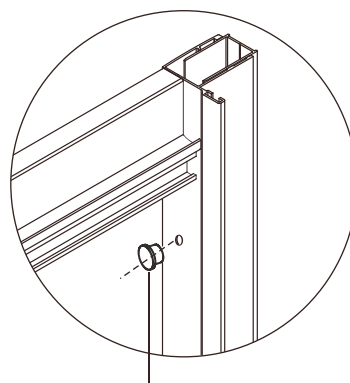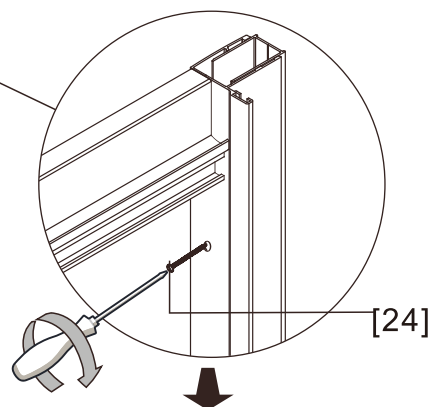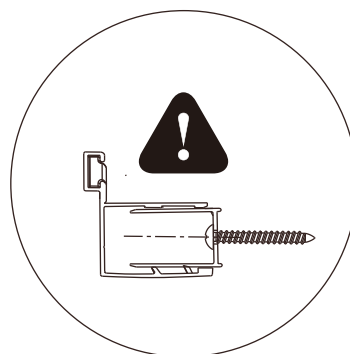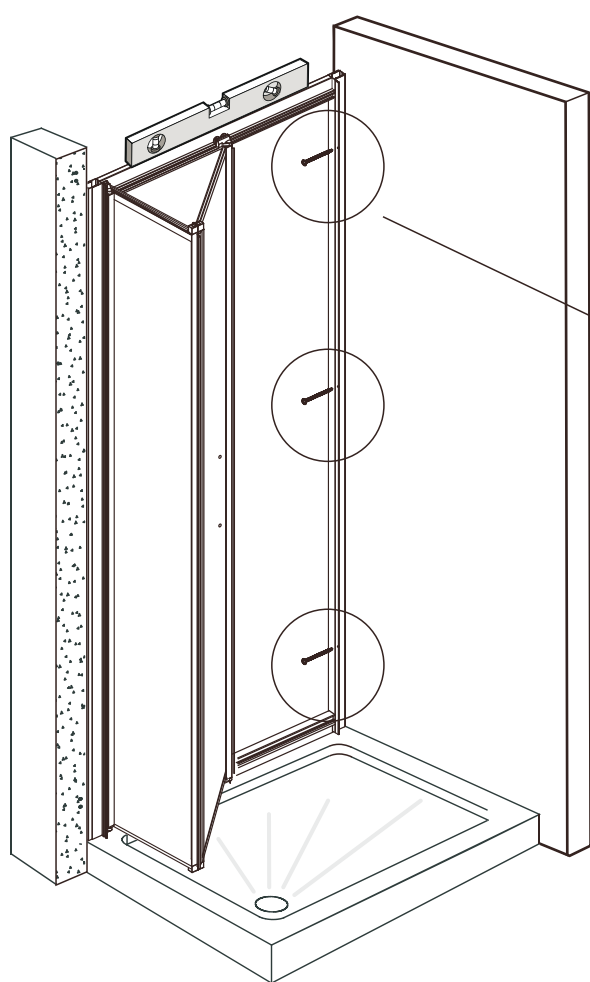

[19]

05






[16]x6



(St4x10mm)

[21]x6

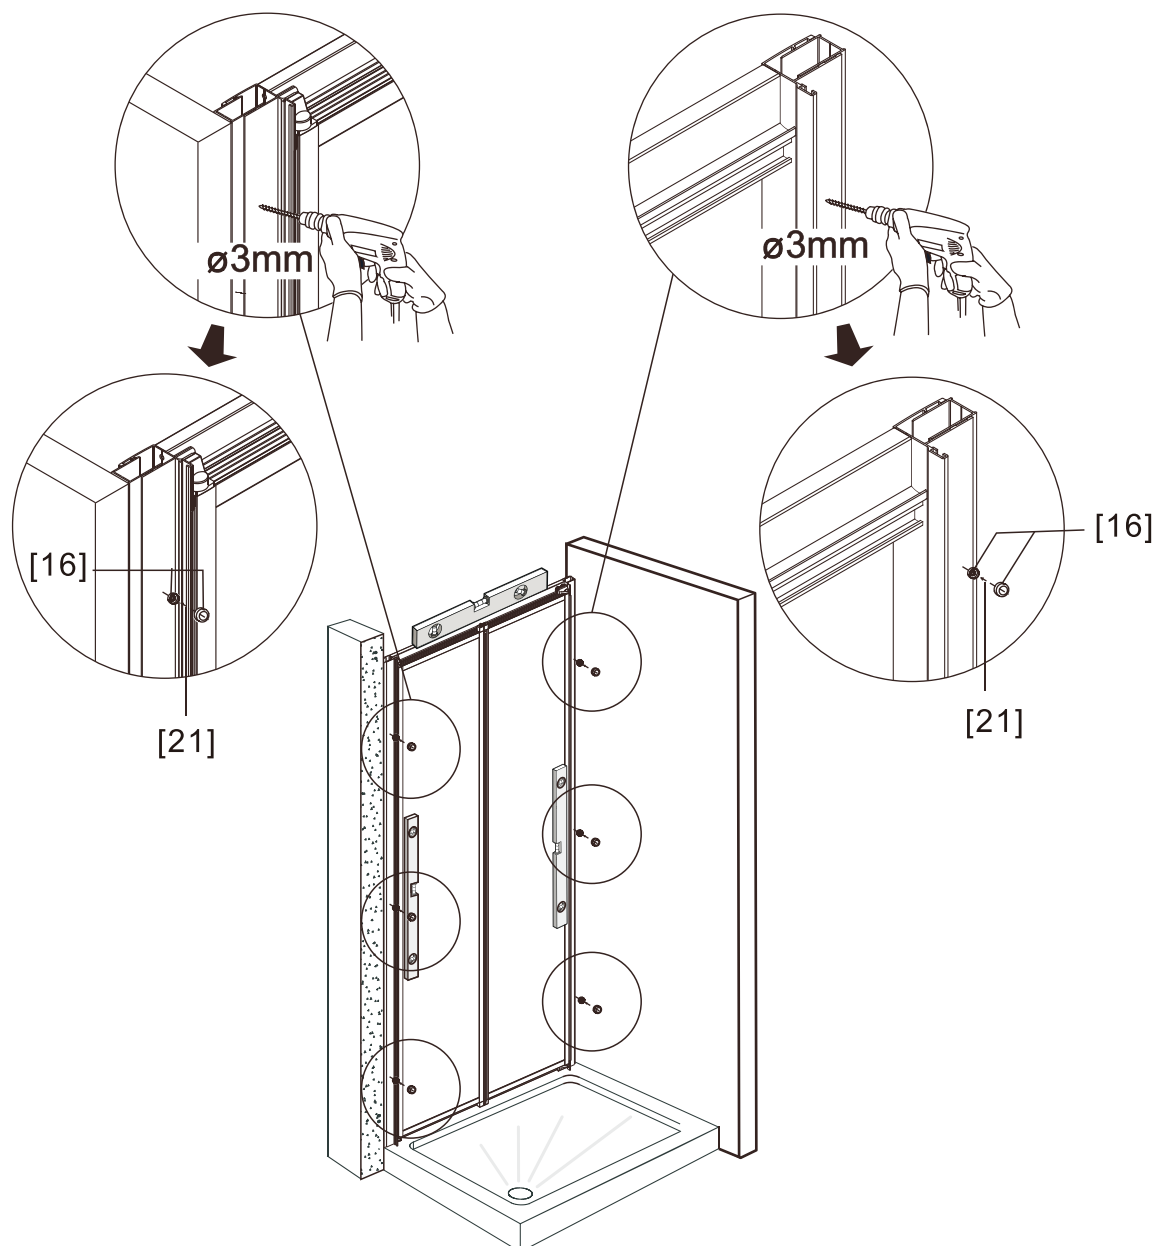


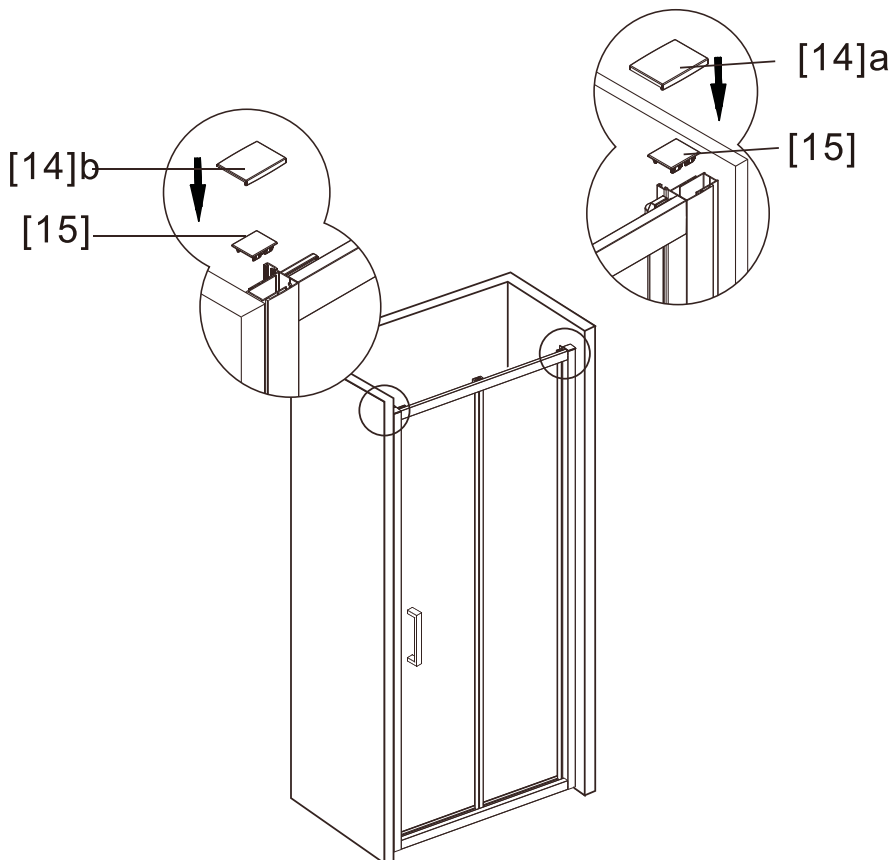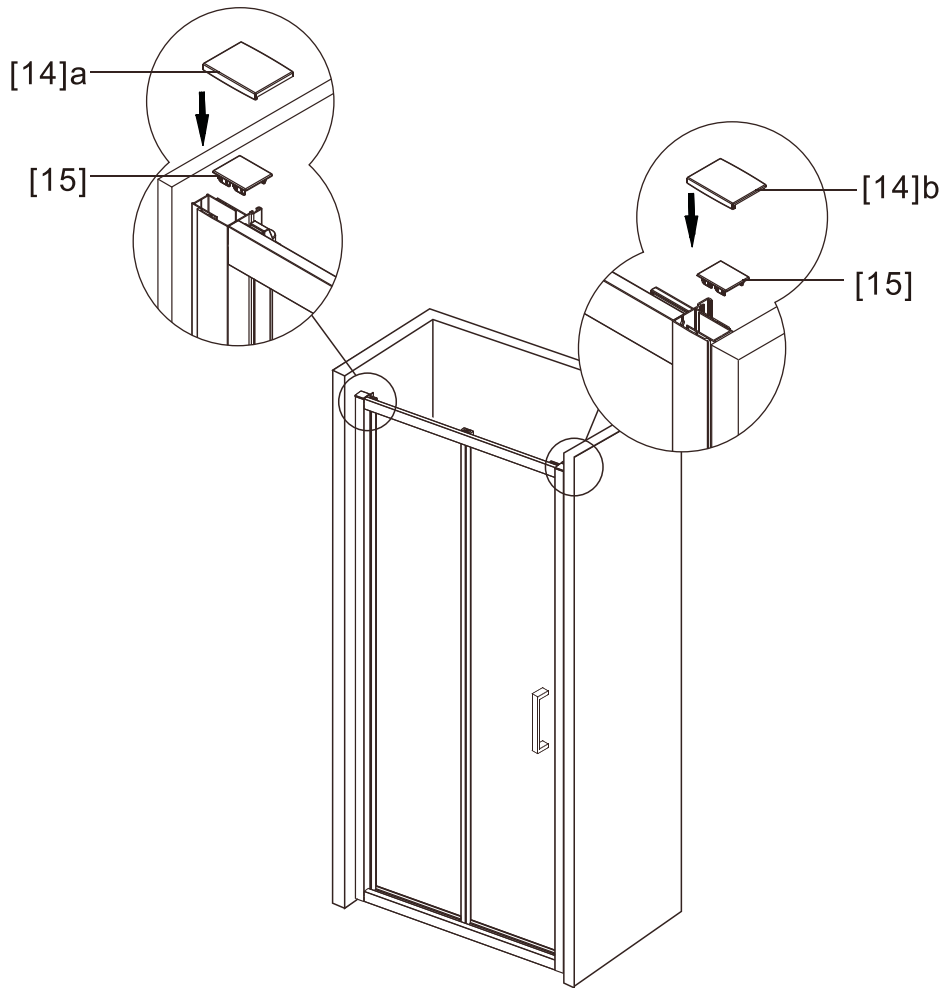

06



[14]ax1



[14]bx1



[15]x2

07



[09]x1

