

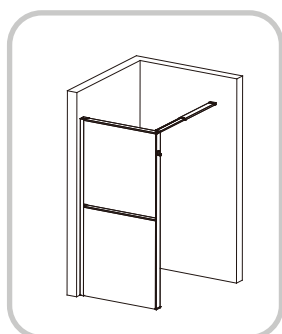
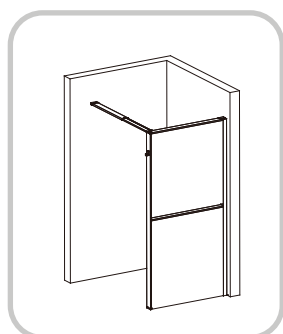


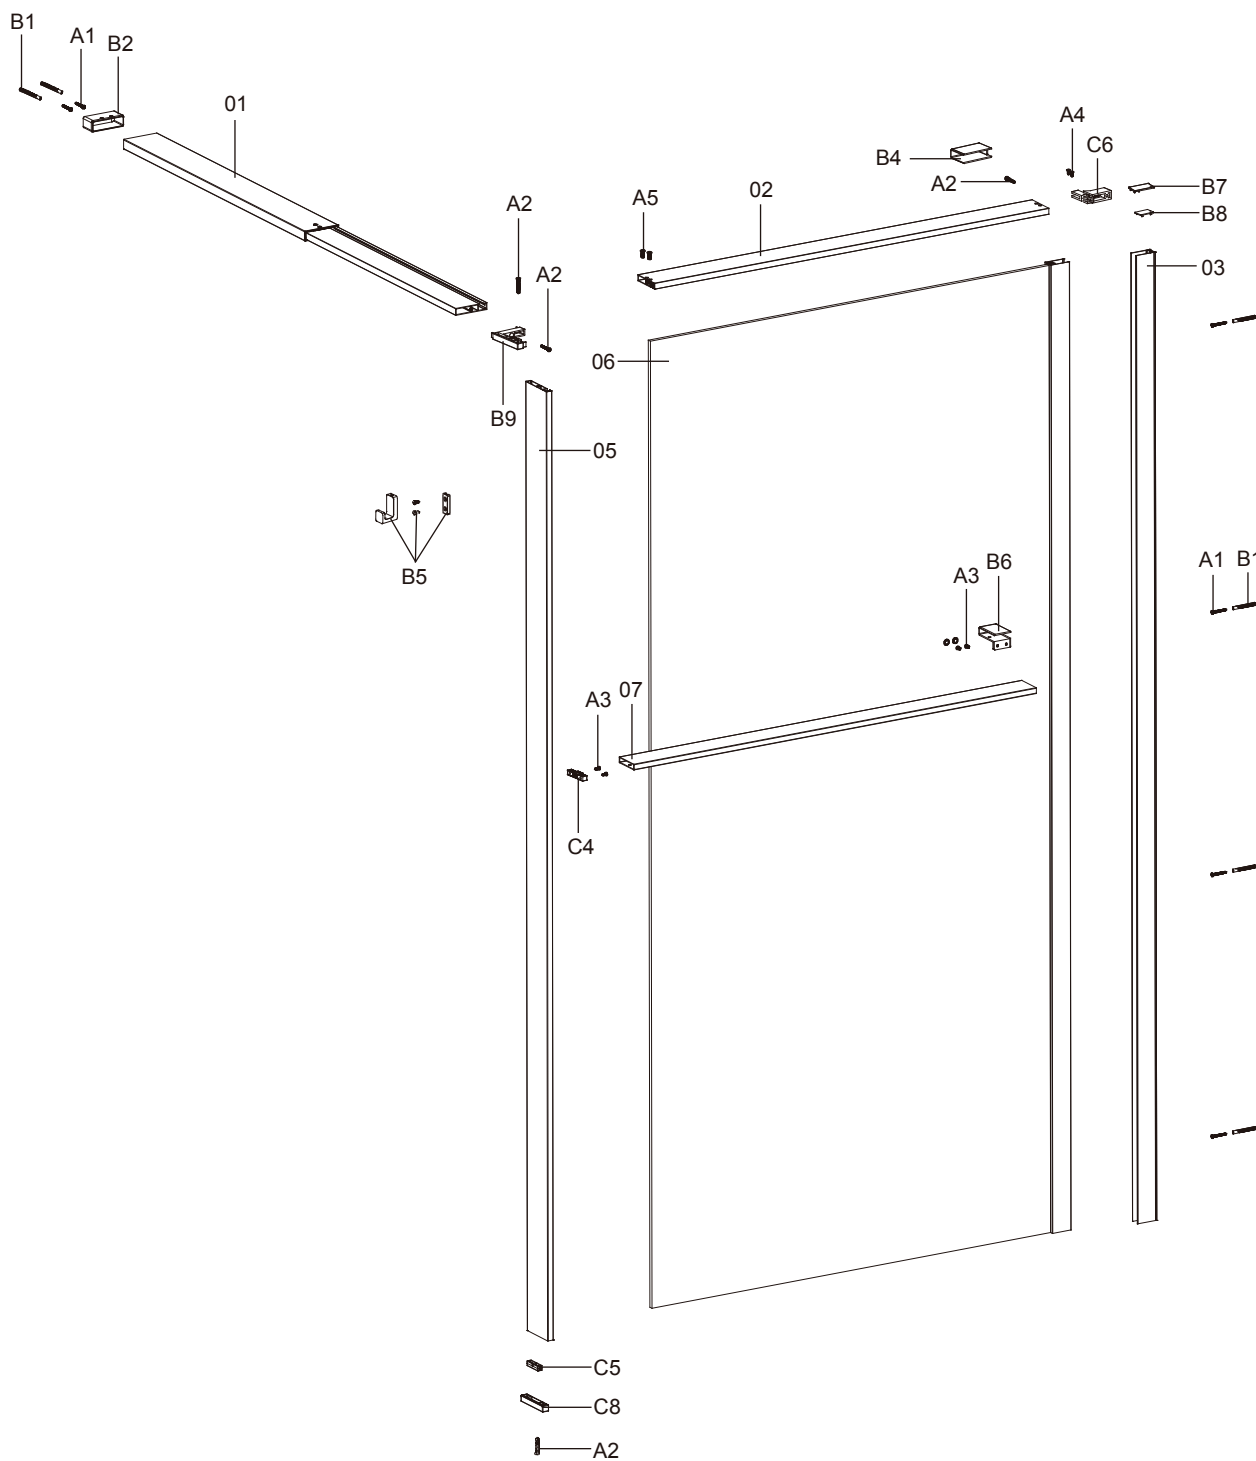

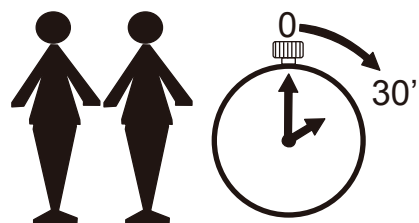
















K991B1	900x2000mm
K991C1	1000x2000mm
K991D1	1200x2000mm
K991E1	1400x2000mm

K991A5	800x2000mm
K991B5	900x2000mm
K991C5	1000x2000mm
K991D5	1200x2000mm
K991E5	1400x2000mm





<p>A1</p>  <p>ST4X30</p>	6	<p>A2</p>  <p>ST4X25</p>	4	<p>A3</p>  <p>ST4X8</p>	4	<p>A4</p>  <p>ST4X10</p>	2
<p>A5</p>  <p>M4X10</p>	2	<p>B1</p> 	6	<p>B2</p> 	1	<p>B4</p> 	1
<p>B5</p>  <p>B5-1 B5-2 B5-3 B5-4</p>	1	<p>B6</p> 	1	<p>B7</p> 	1	<p>B8</p> 	1
<p>B9</p> 	1	<p>C4</p> 	1	<p>C5</p> 	1	<p>C6</p> 	1
<p>C8</p> 	1	<p>Z1</p>  <p>3mm</p>	1	<p>Z2</p> 	2		

01

Montaža Montaža Assembly




[03]x1




ST4X30
[A1]x4




[B1]x4

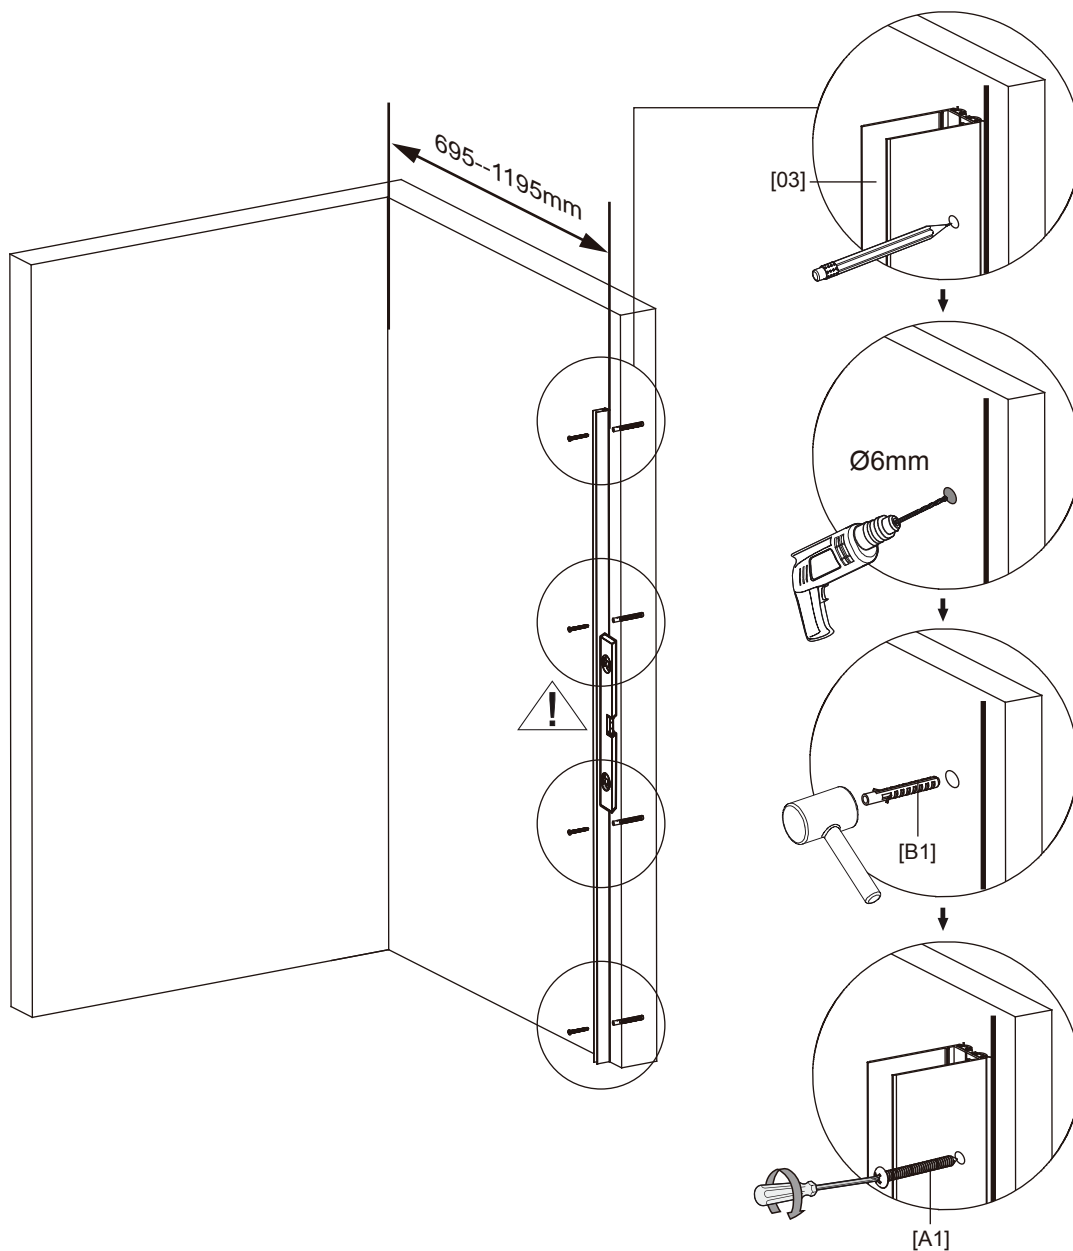

02

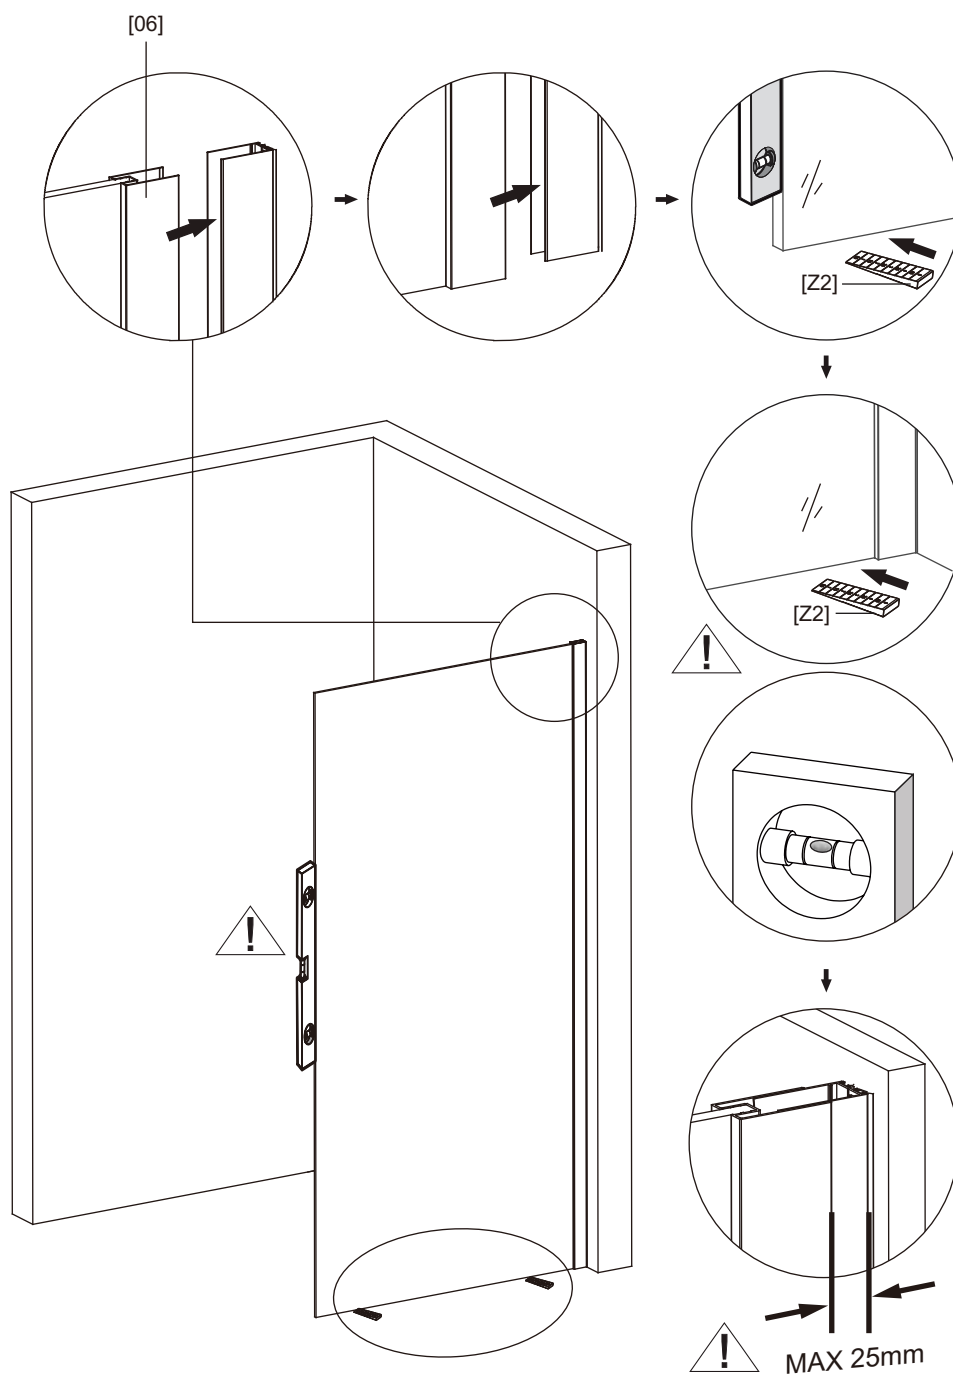

[06]x1




[Z2]x2


03



[05]x1



[C5]x1





[C8]x1




ST4X25


[A2]x1

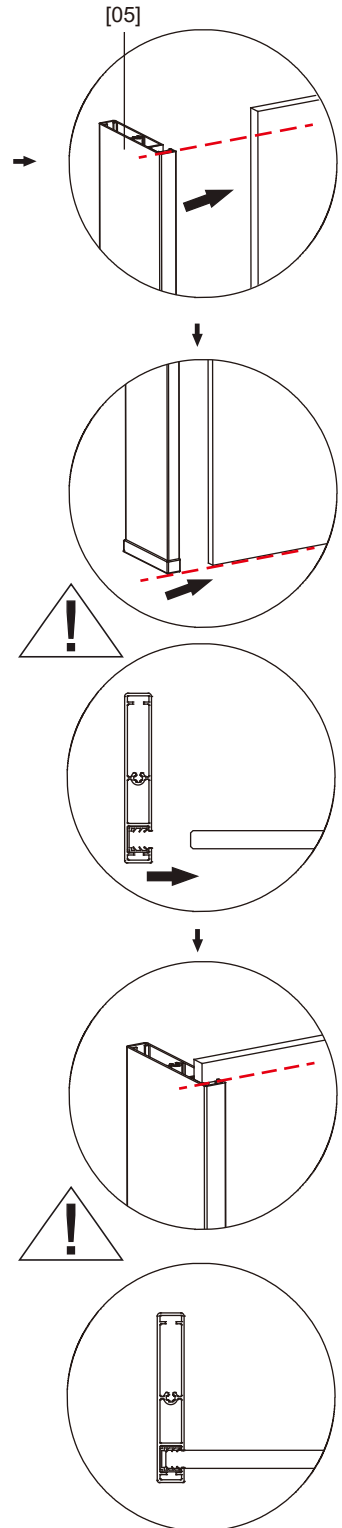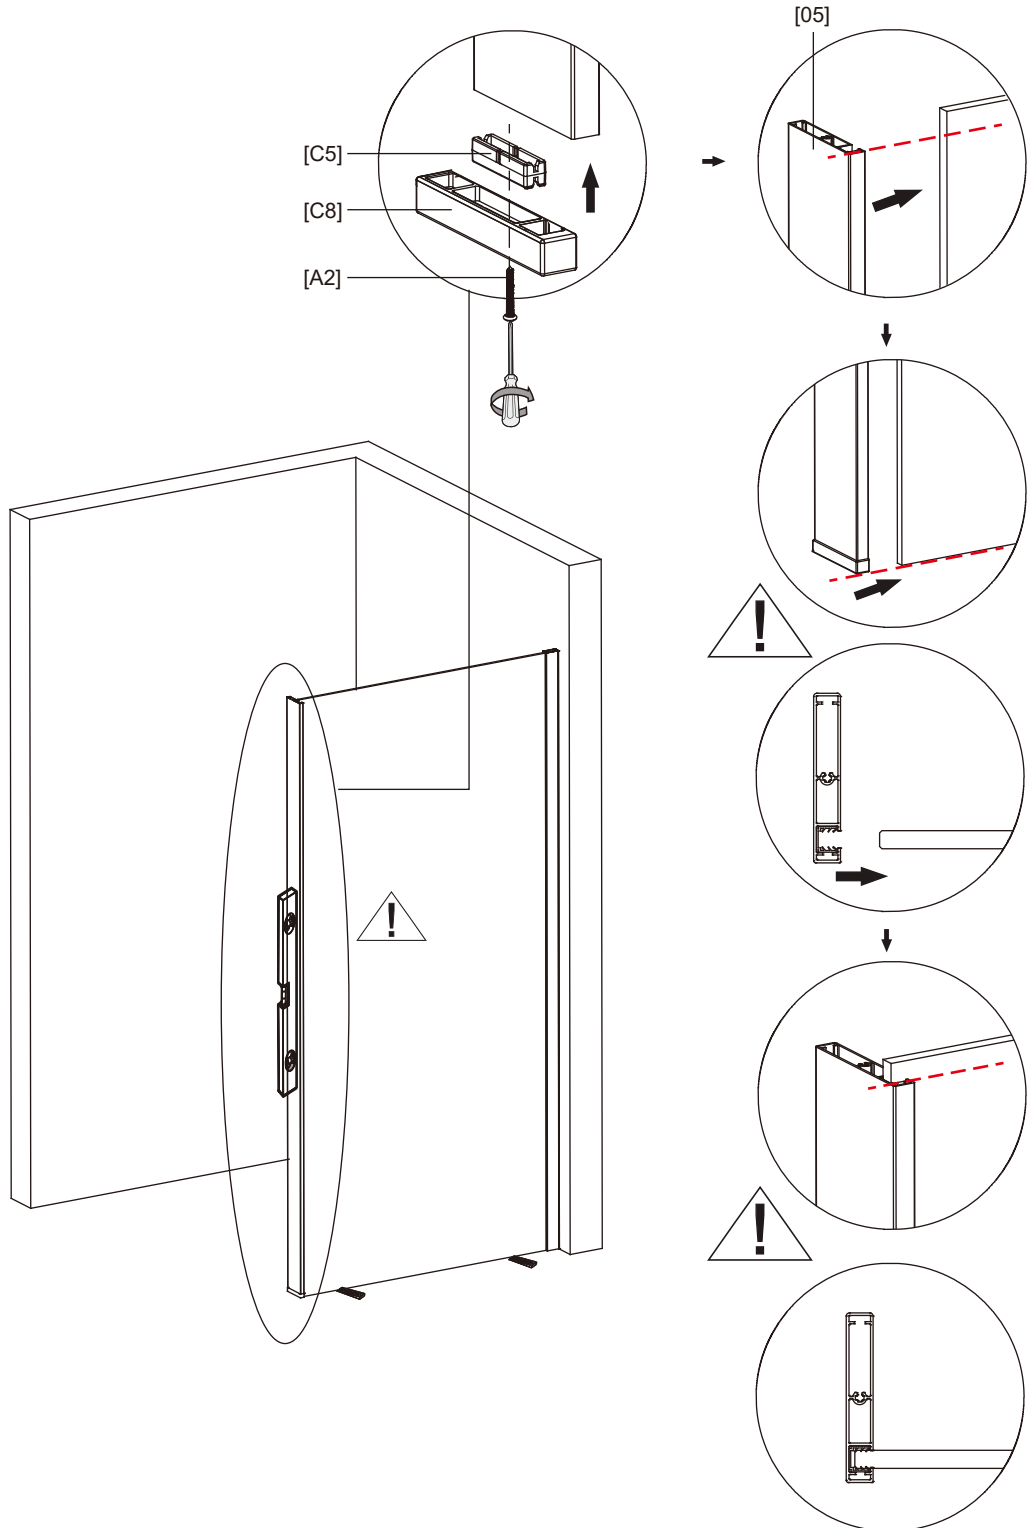

05








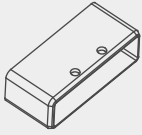


[B2]x1




ST4X25

[A2]x1

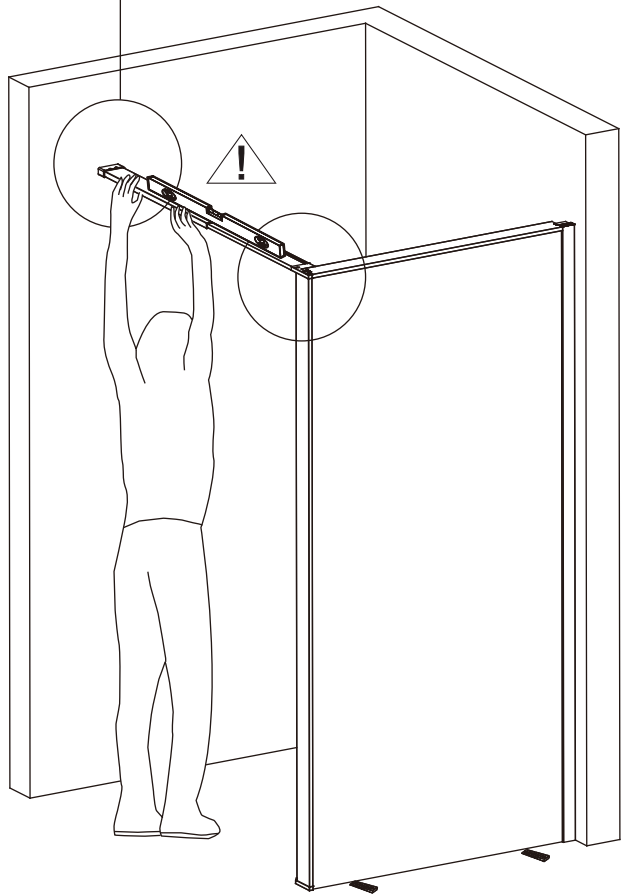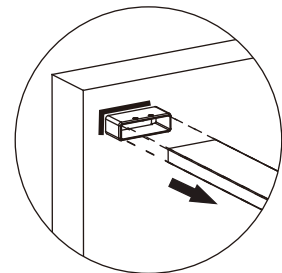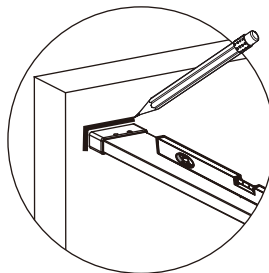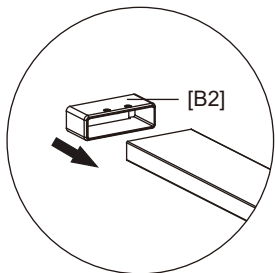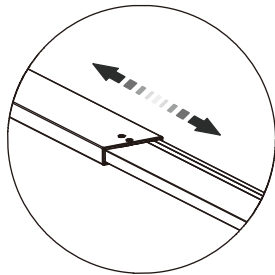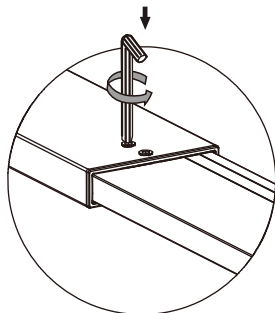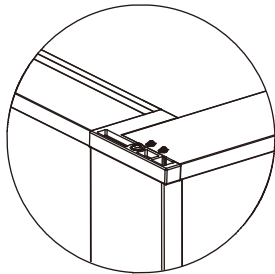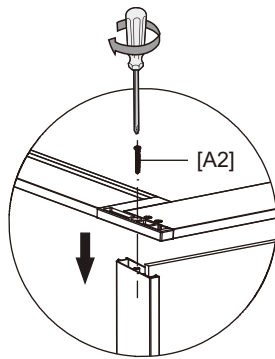

06

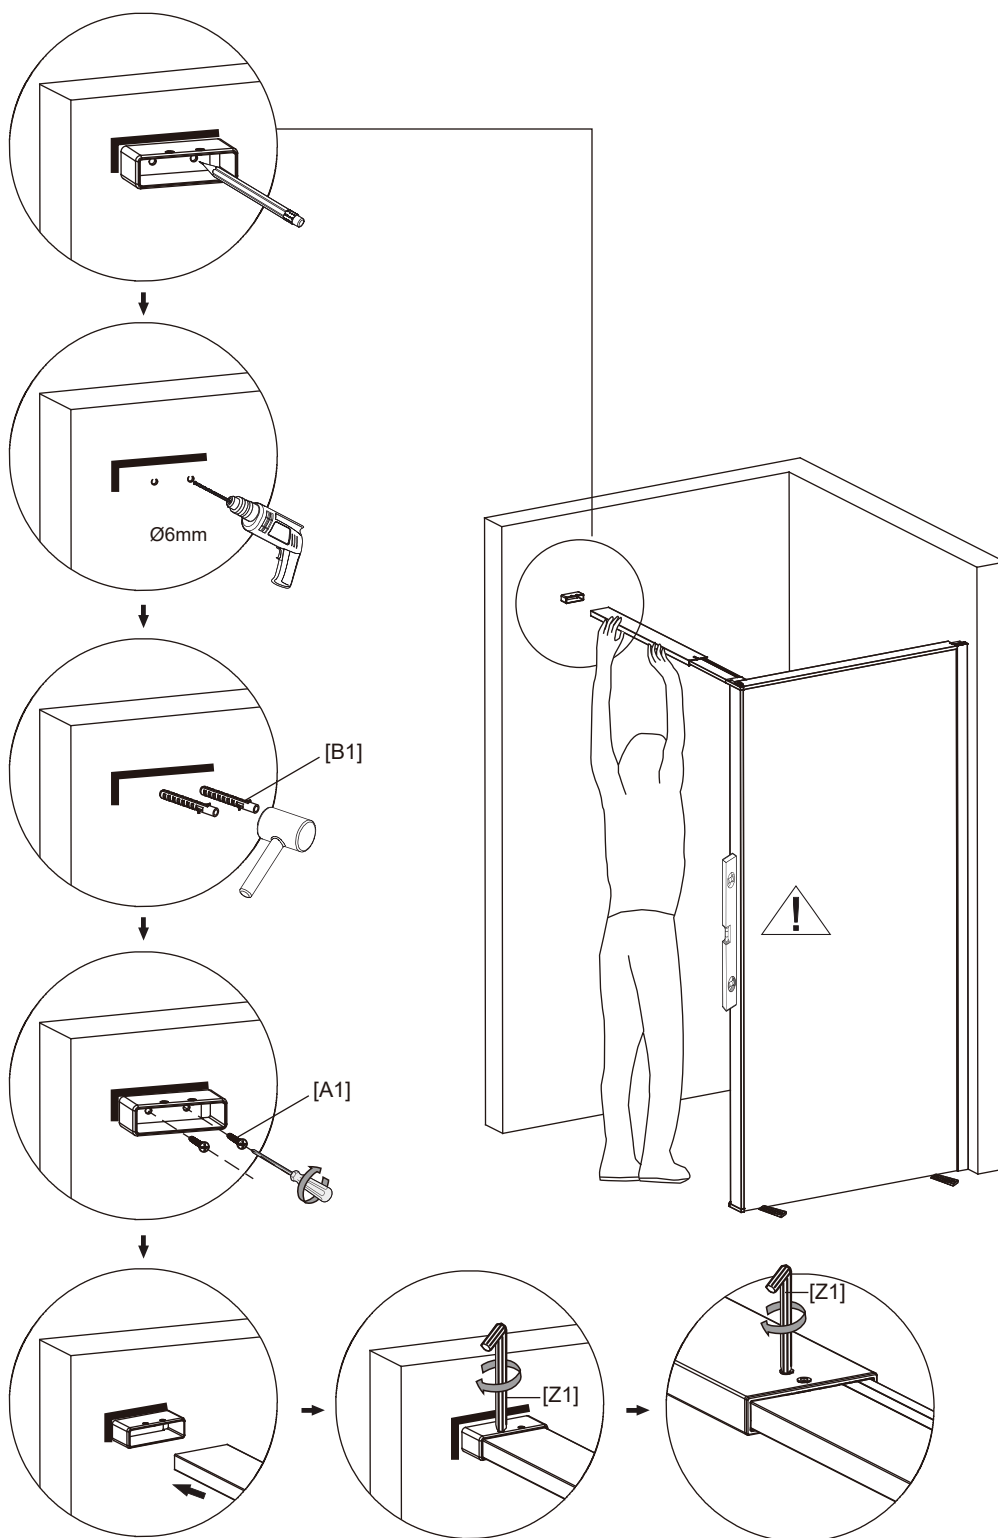

ST4X30
[A1]x2




[B1]x2



[Z1]x1







07








[B4]x1



ST4X25
[A2]x1

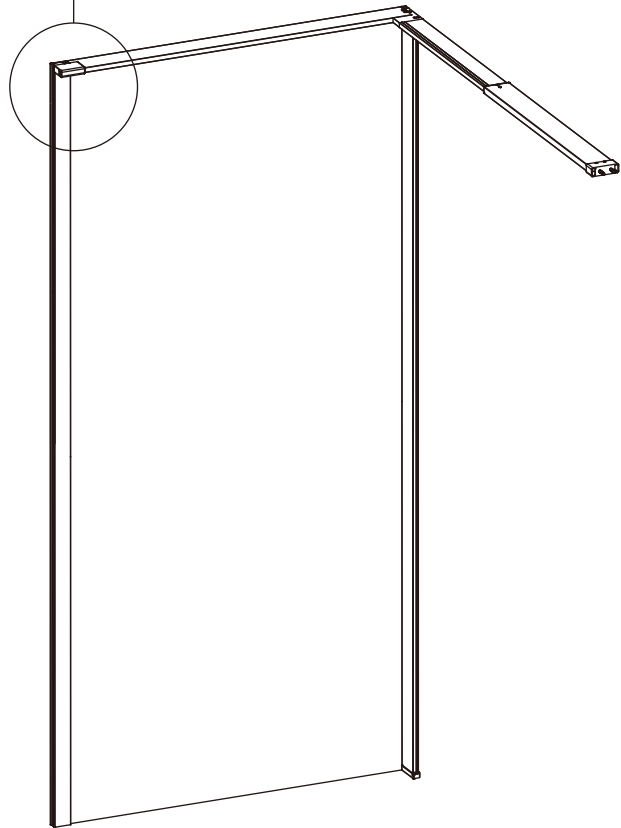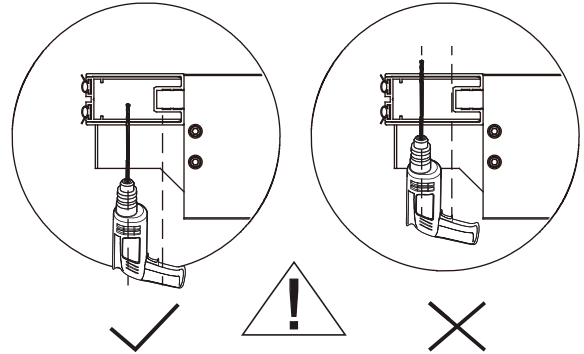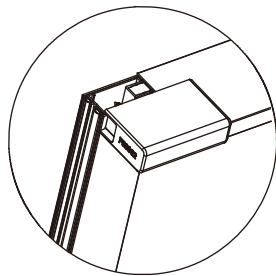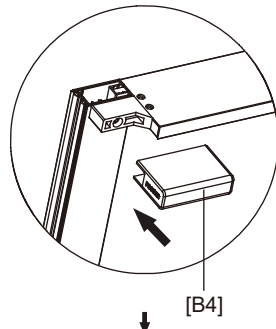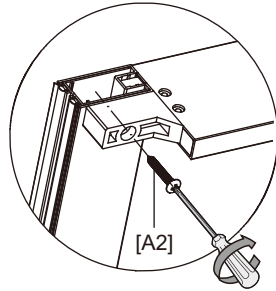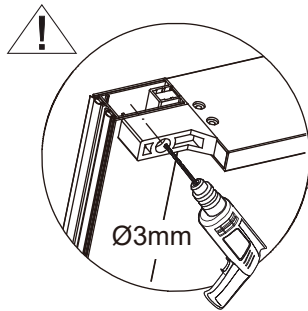


08

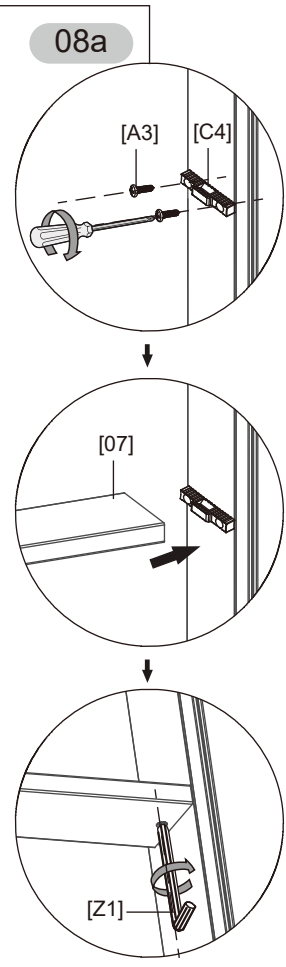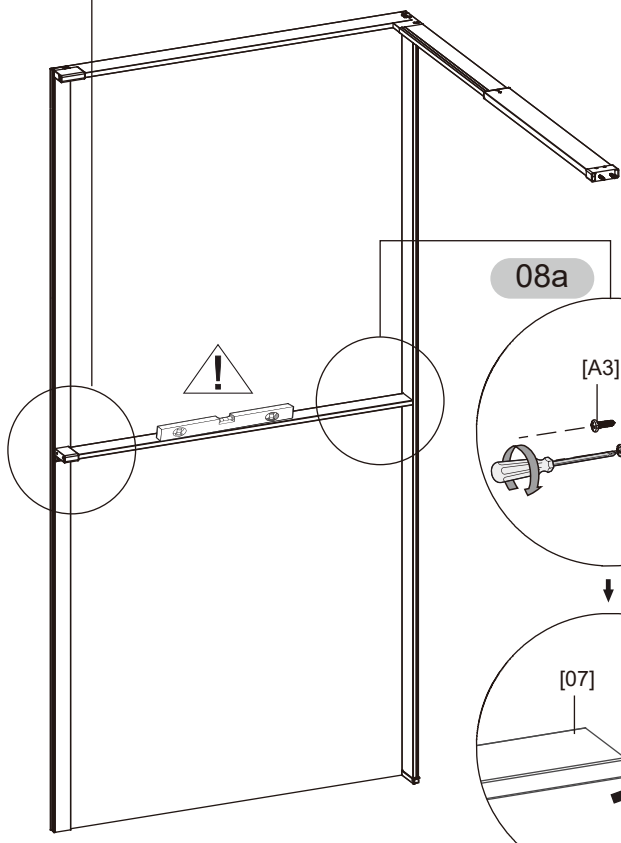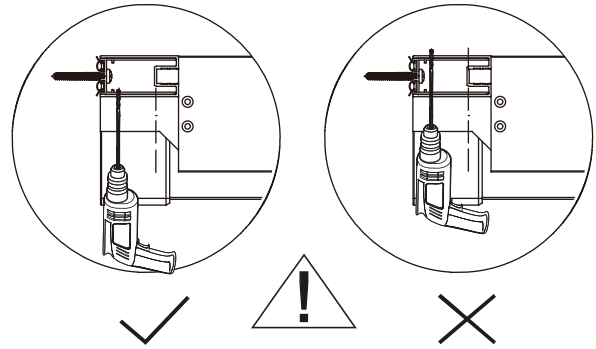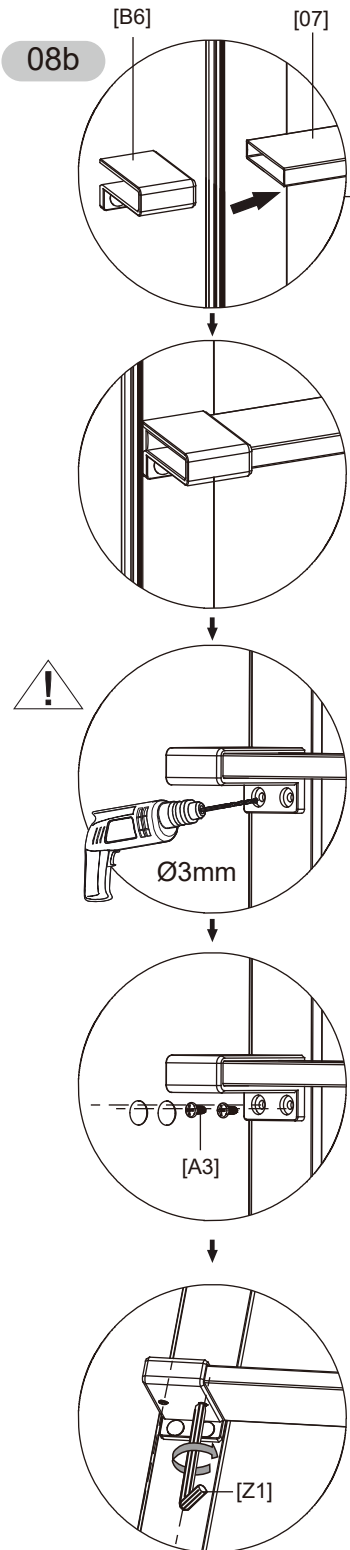


[B6]x1



[07]x1



[C4]x1





ST4X8
[A3]x4




[Z1]x1


09

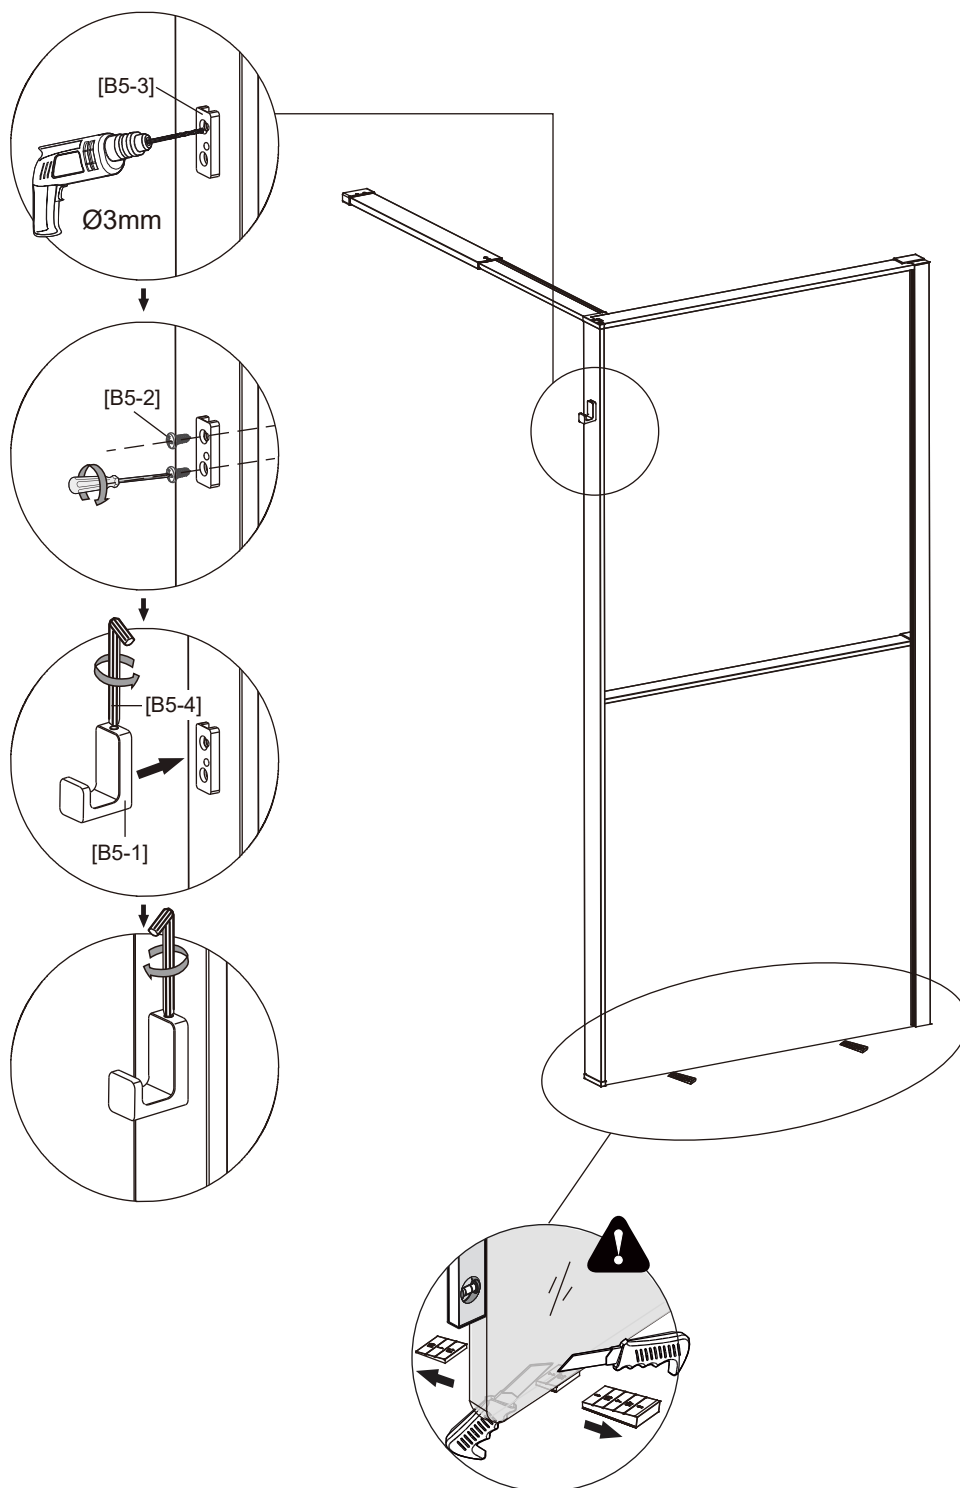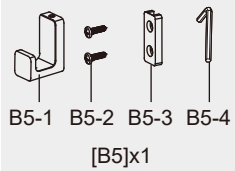

10

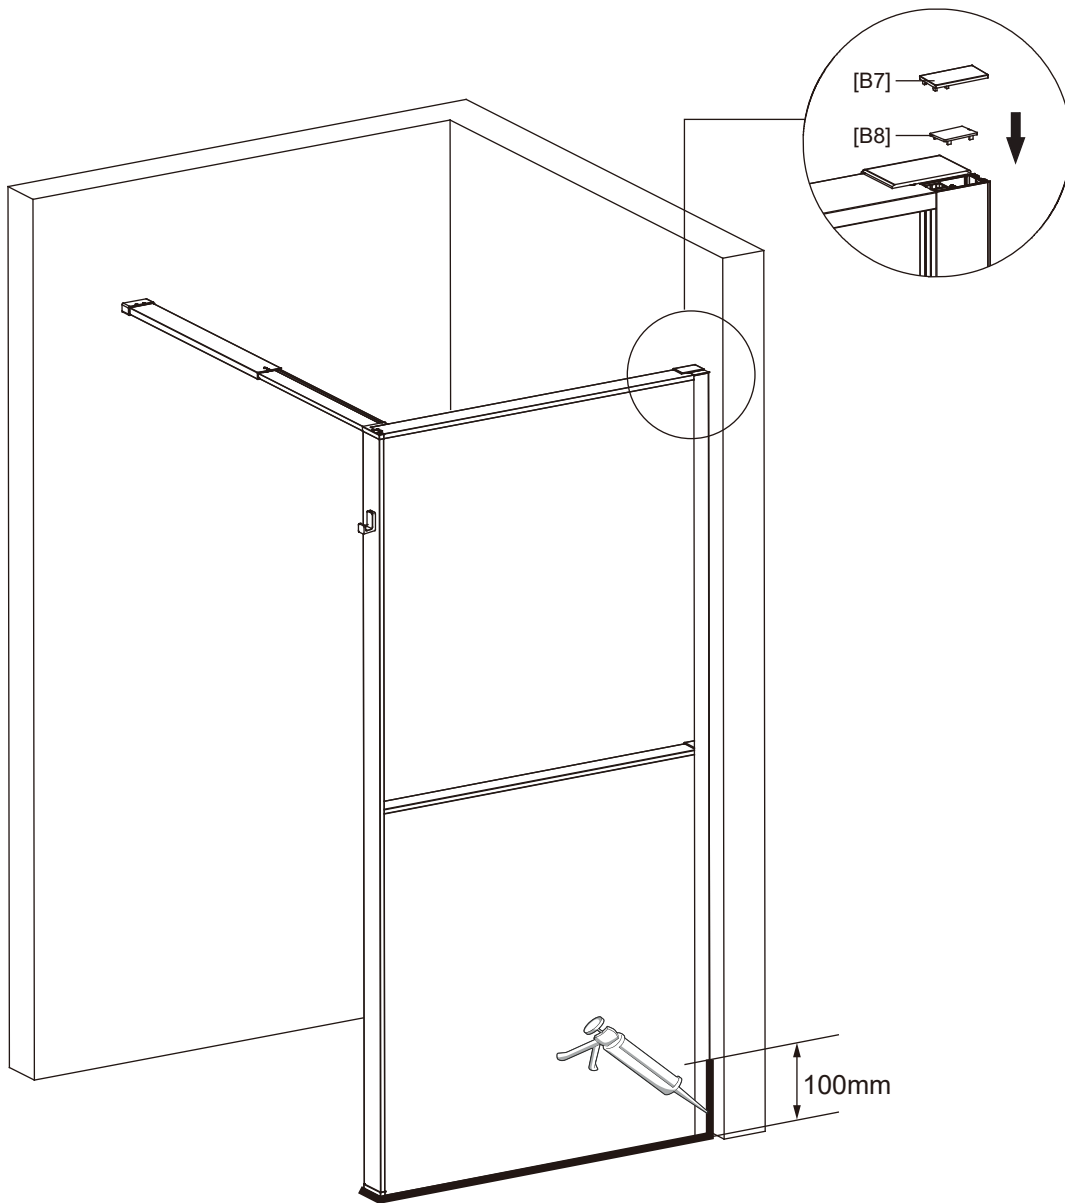

[B8]x1



[B7]x1

