



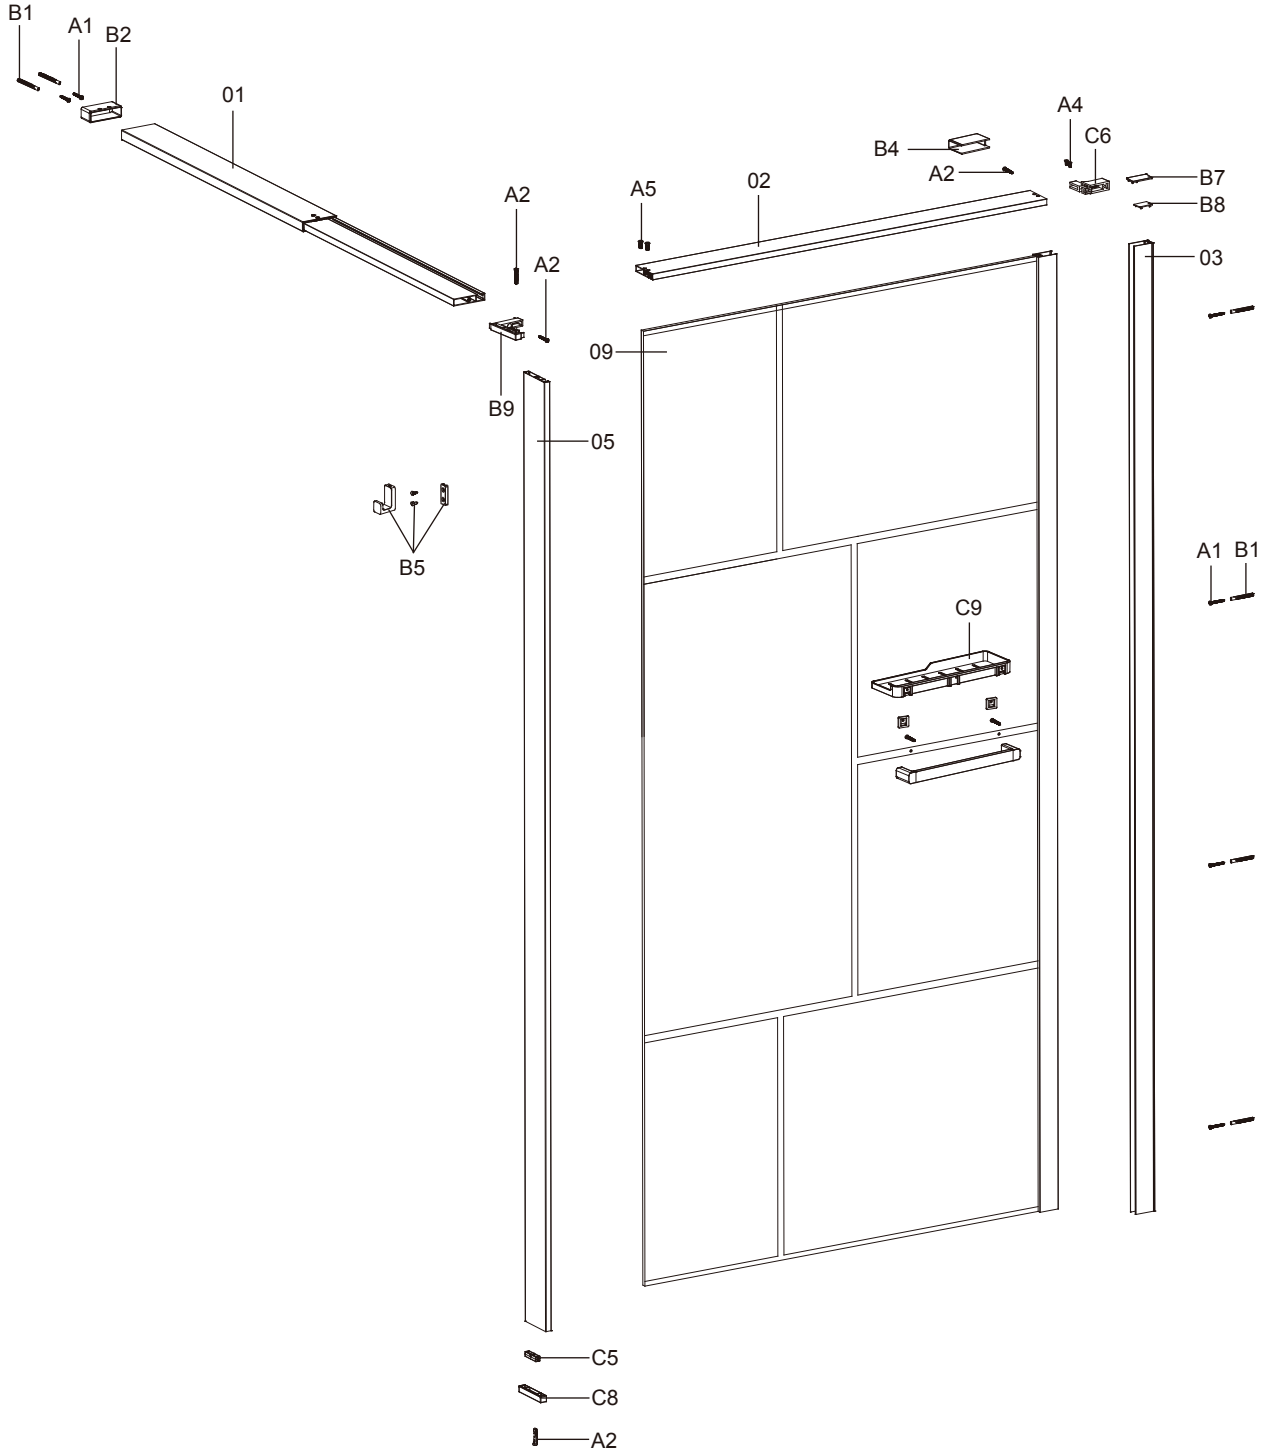




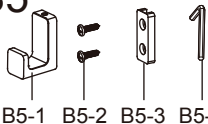






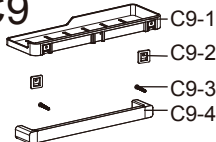





K991A	800x2000mm
K991B	900x2000mm
K991C	1000x2000mm
K991D	1200x2000mm
K991E	1400x2000mm

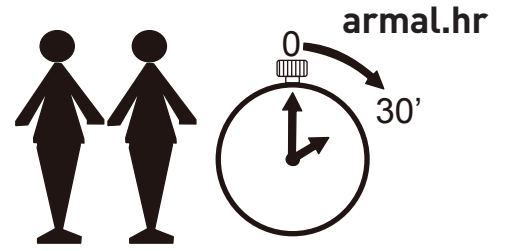

<p>A1</p>  <p>ST4X30</p>	<p>6</p>	<p>A2</p>  <p>ST4X25</p>	<p>4</p>	<p>A4</p>  <p>ST4X10</p>	<p>2</p>	<p>A5</p>  <p>M4X10</p>	<p>2</p>	
<p>B1</p> 	<p>6</p>	<p>B2</p> 	<p>1</p>	<p>B4</p> 	<p>1</p>	<p>B5</p>  <p>B5-1 B5-2 B5-3 B5-4</p>	<p>1</p>	
<p>B7</p> 	<p>1</p>	<p>B8</p> 	<p>1</p>	<p>B9</p> 	<p>1</p>	<p>C5</p> 	<p>1</p>	
<p>C6</p> 	<p>1</p>	<p>C8</p> 	<p>1</p>	<p>C9</p>  <p>C9-1 C9-2 C9-3 C9-4</p>	<p>1</p>	<p>Z1</p>  <p>3mm</p>	<p>1</p>	
<p>Z2</p> 	<p>2</p>							

01

Montaža Montaža Assembly




[03]x1





ST4X30
[A1]x4




[B1]x4

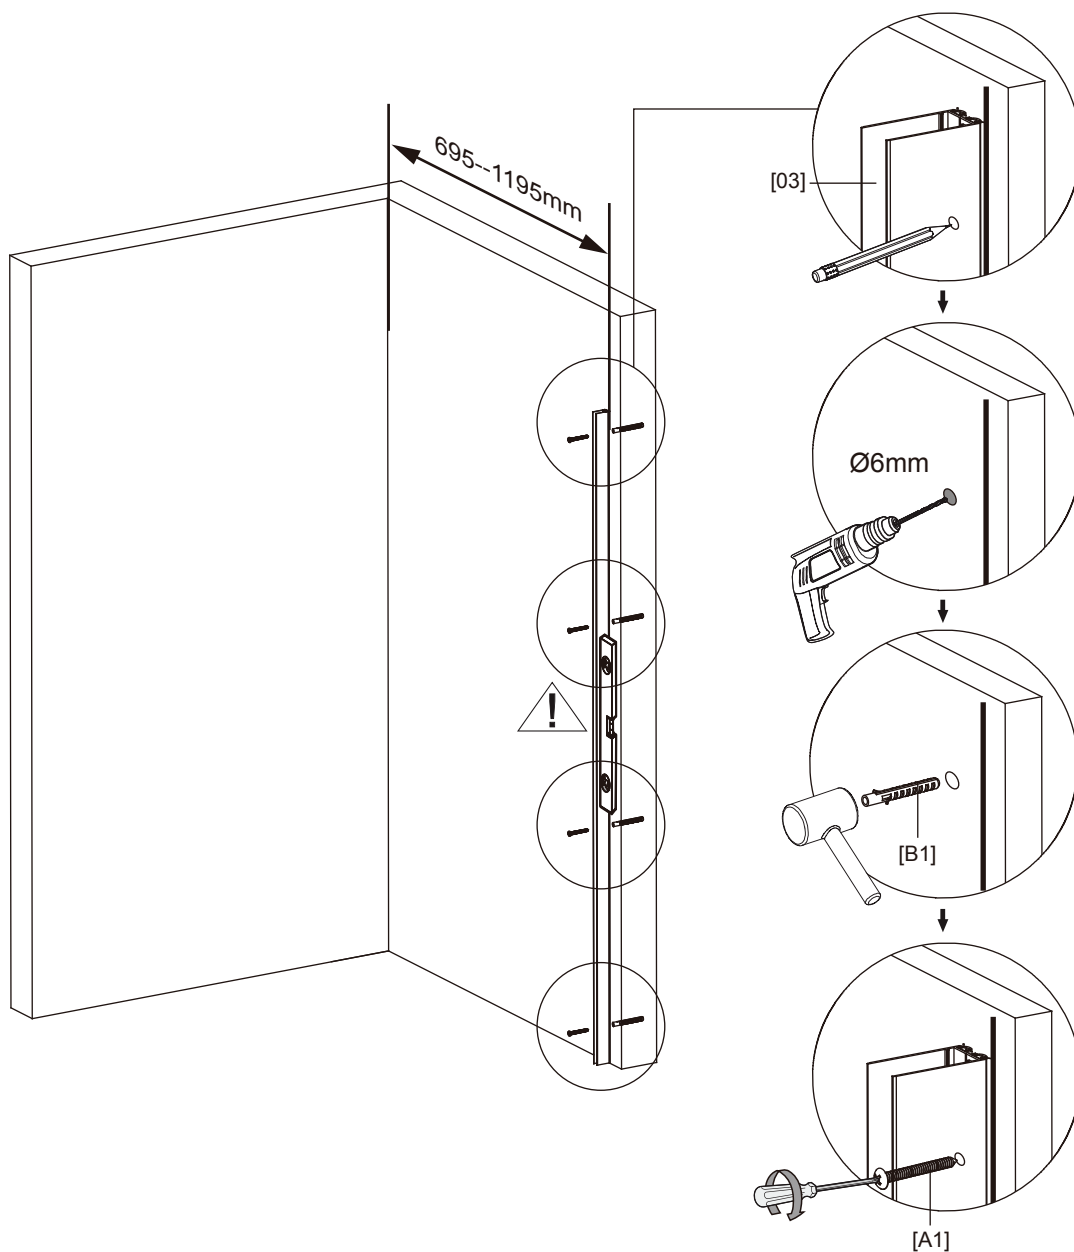

02

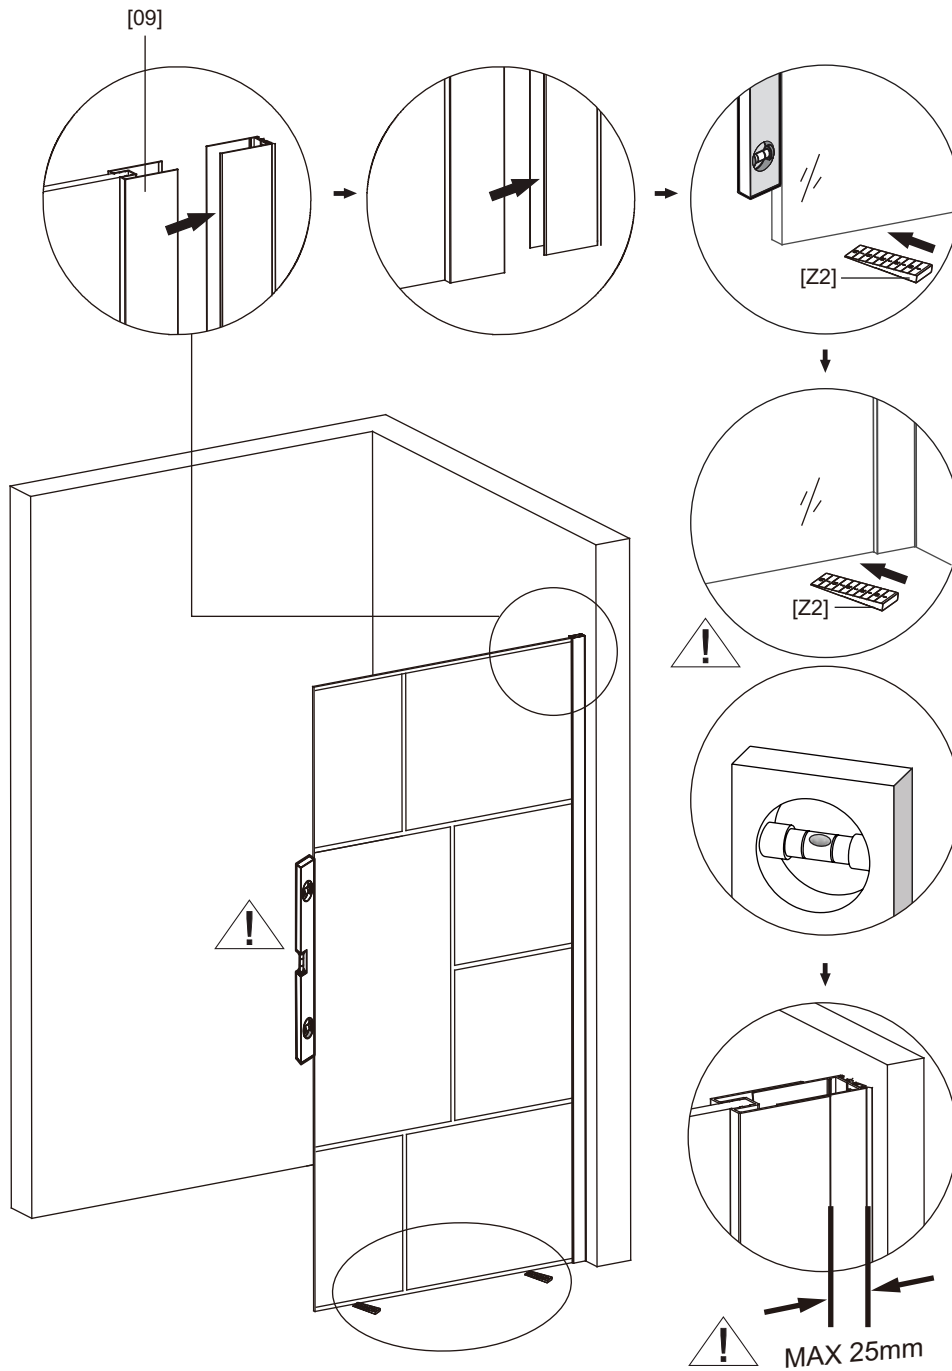

[09]x1




[Z2]x2


03



[05]x1



[C5]x1




[C8]x1





ST4X25


[A2]x1

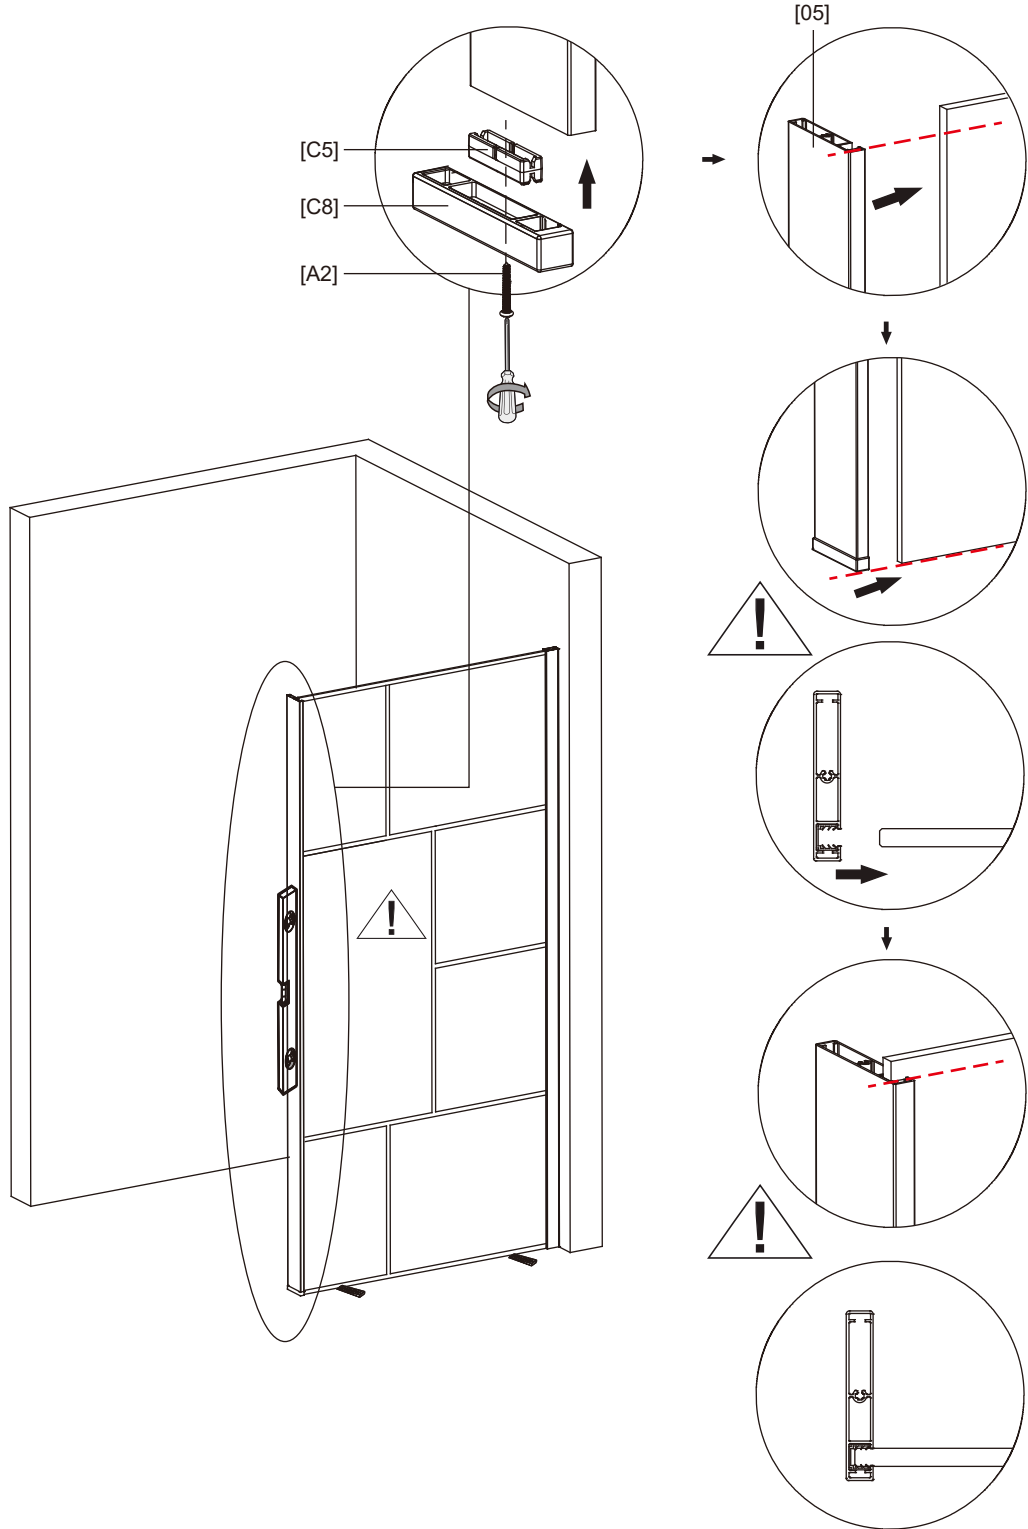


04

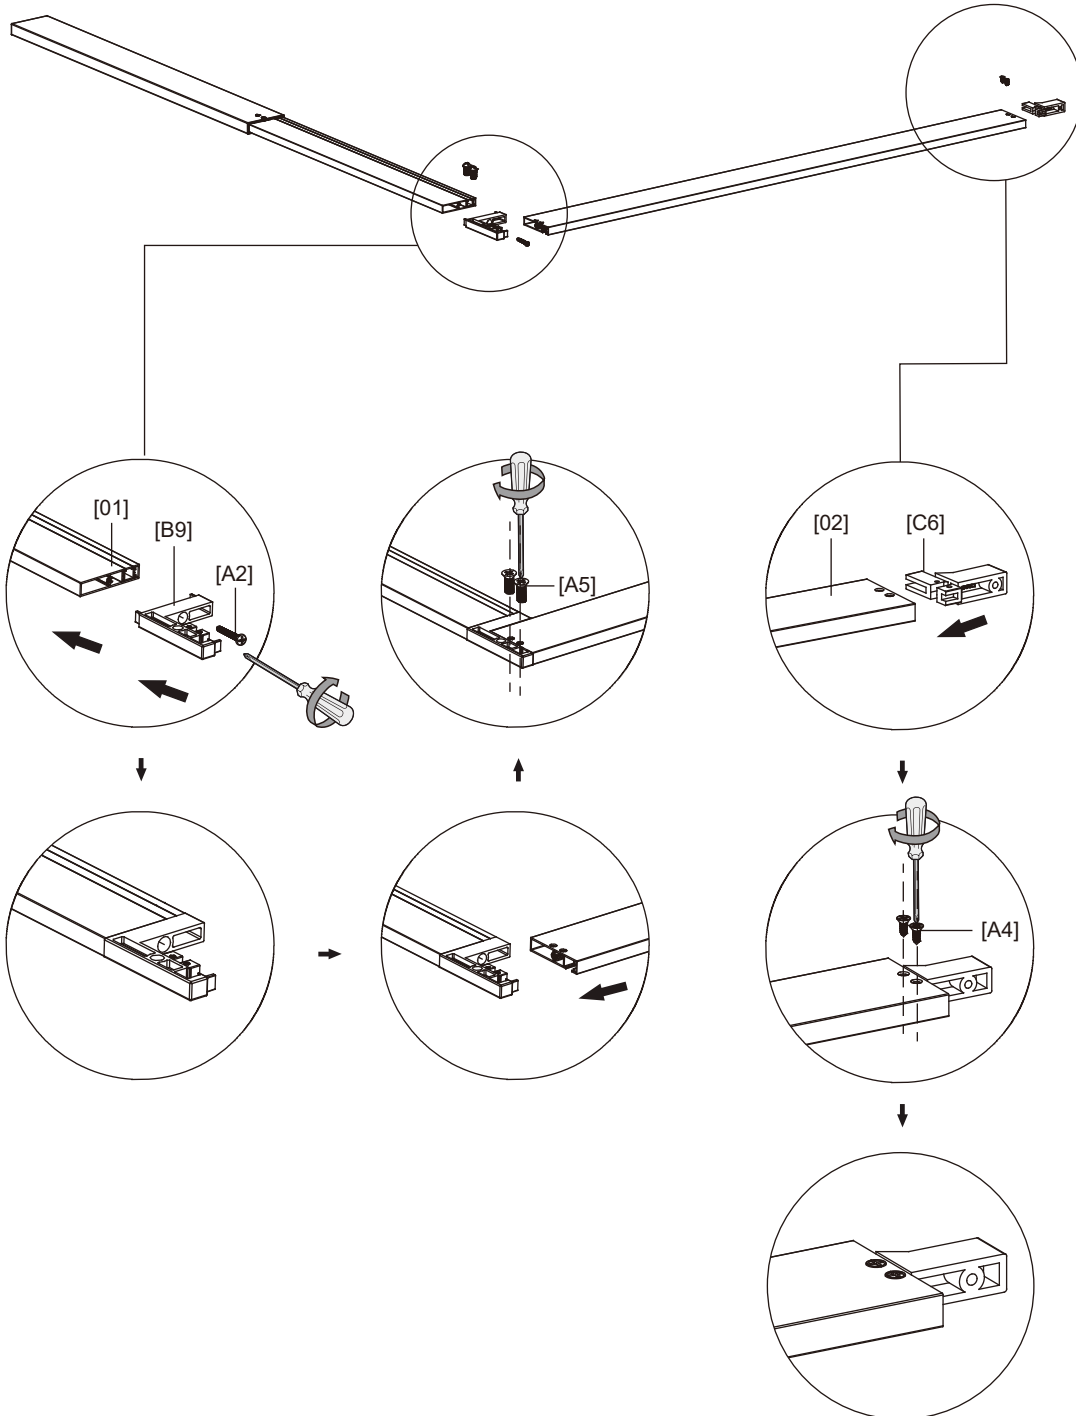

[01]x1



[02]x1




[B9]x1



[C6]x1



ST4X25
[A2]x1




ST4X10
[A4]x2



M4X10
[A5]x2

05








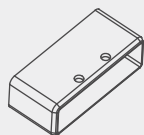


[B2]x1




ST4X25

[A2]x1

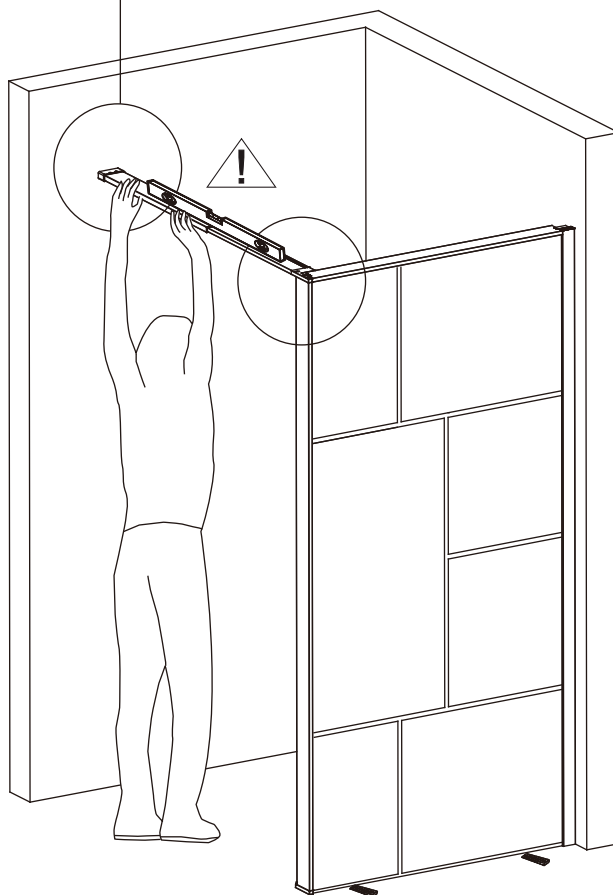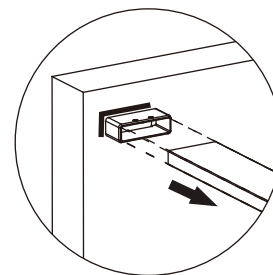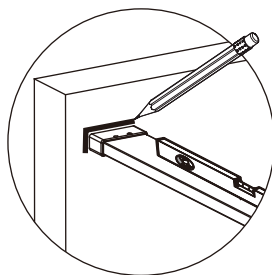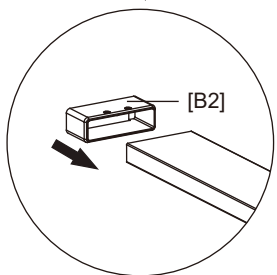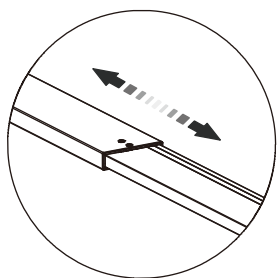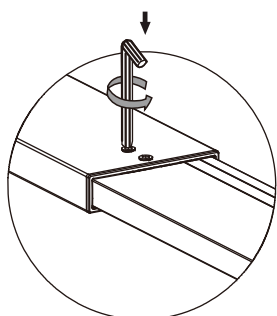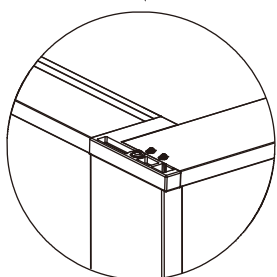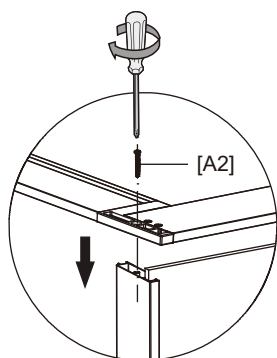


06

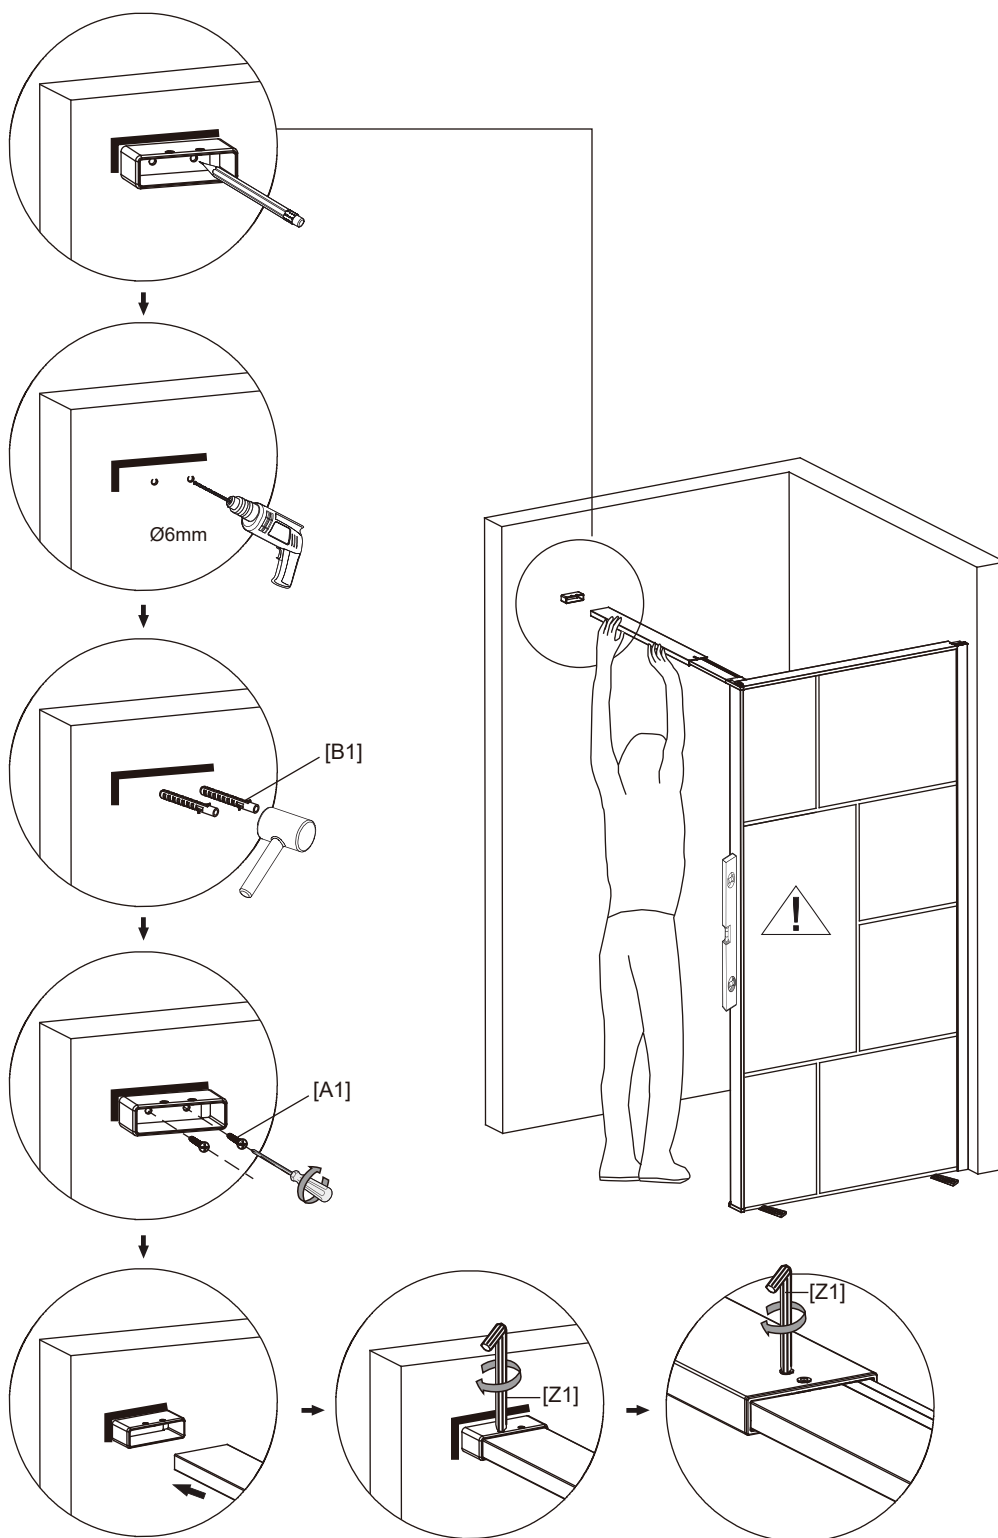

ST4X30
[A1]x2




[B1]x2



[Z1]x1







07




[B4]x1








ST4X25
[A2]x1

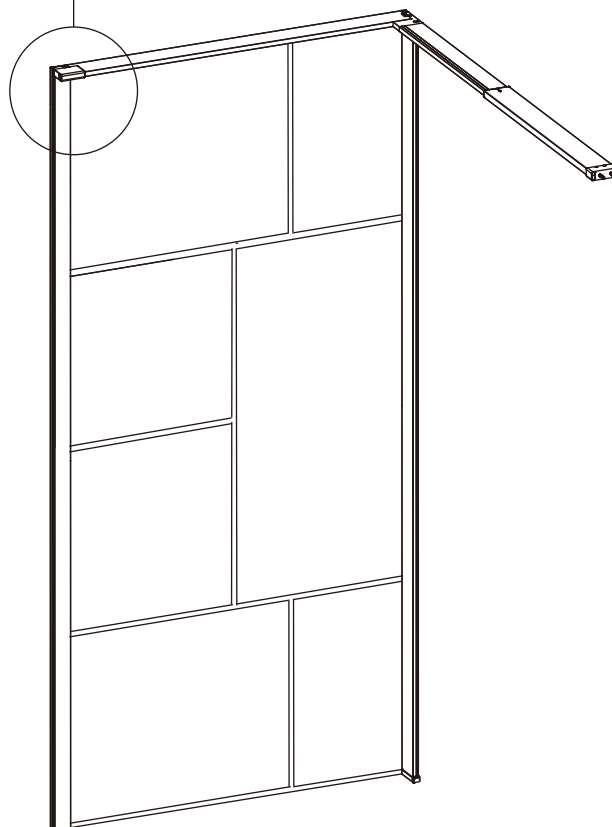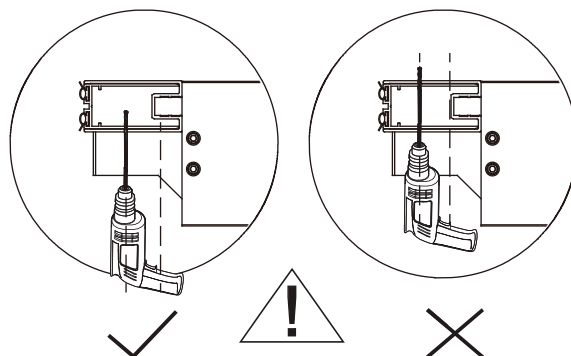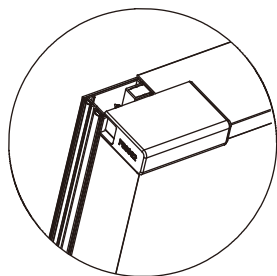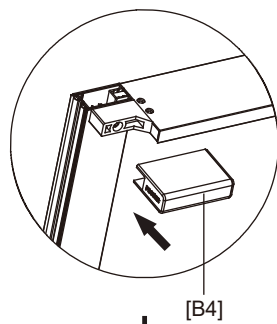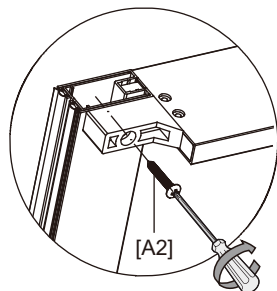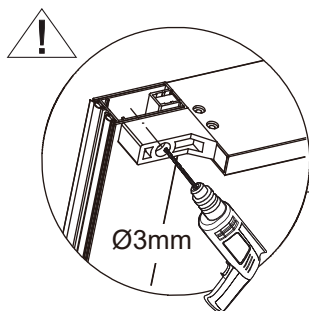



08

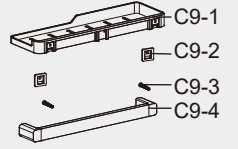



[C9]x1

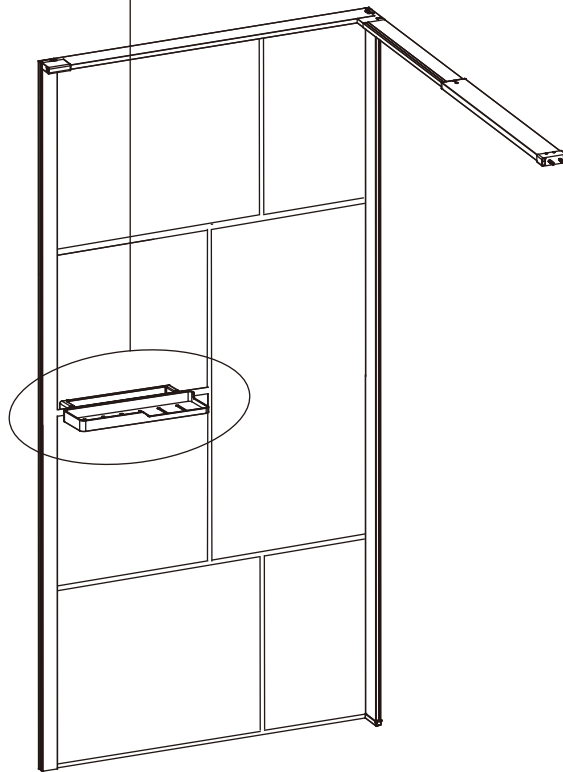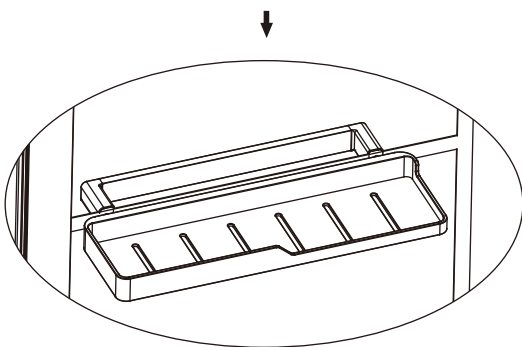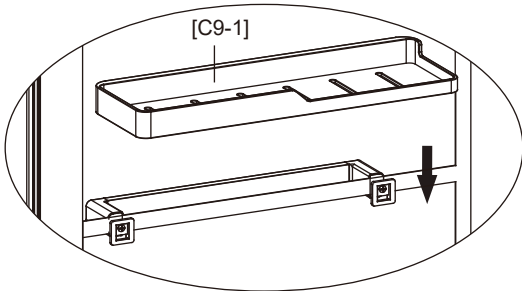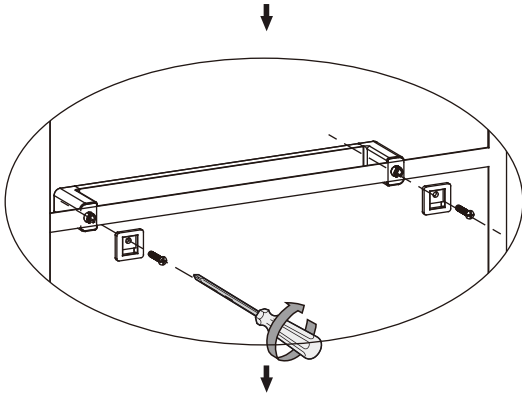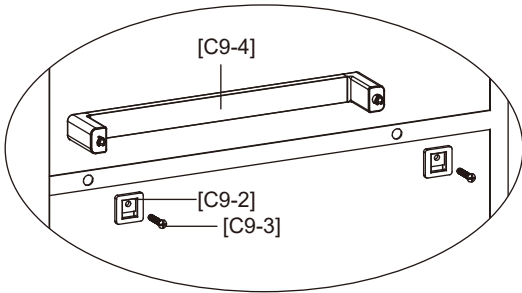


09

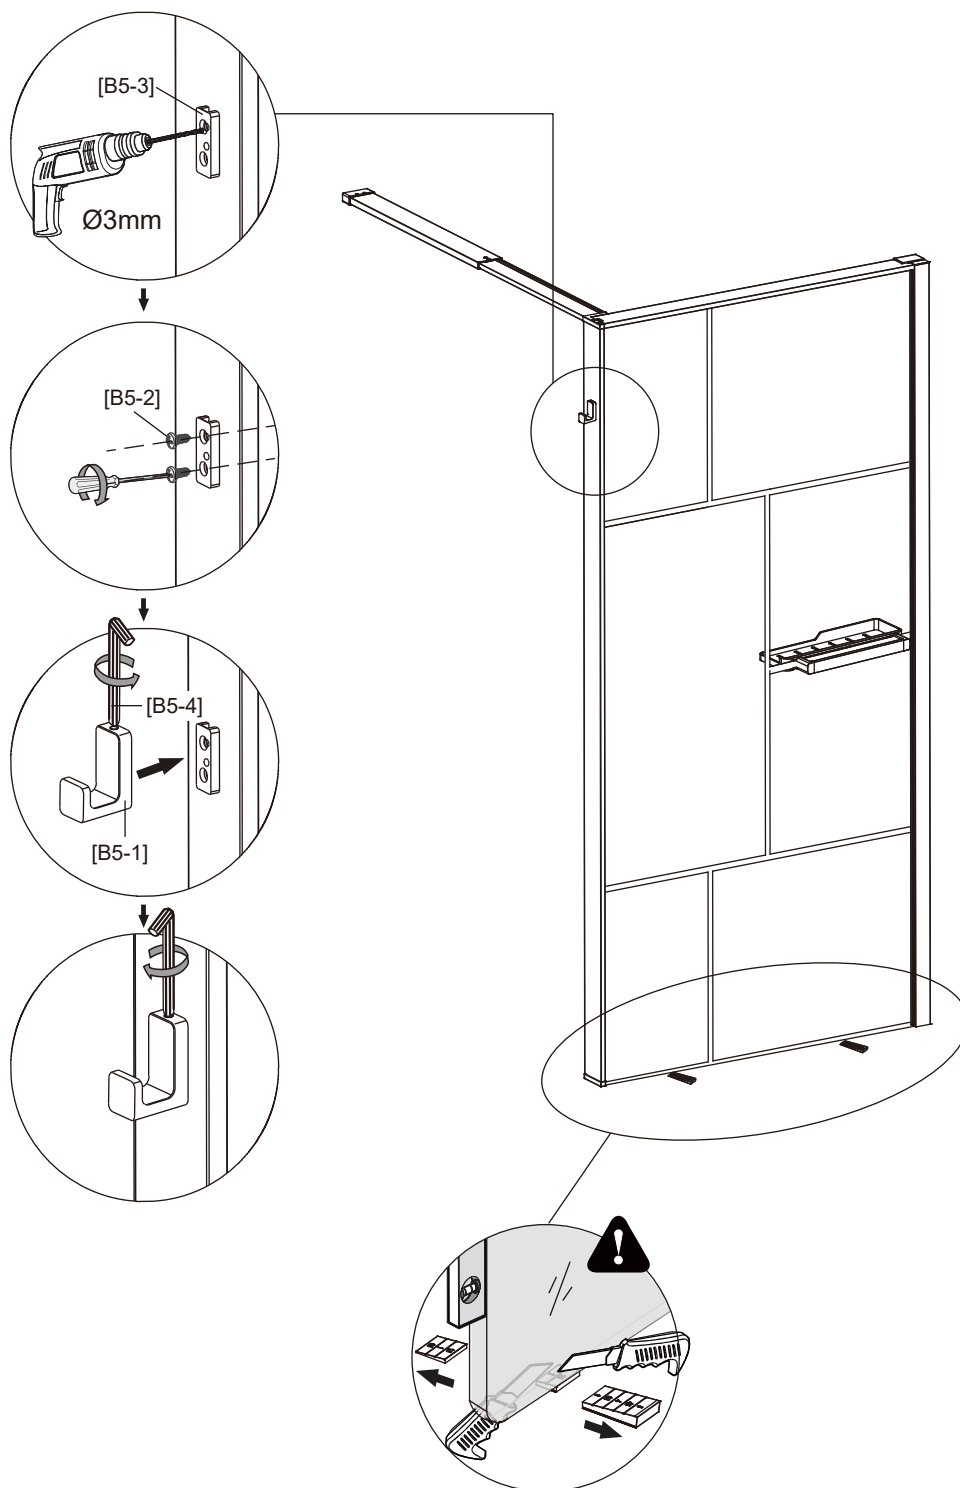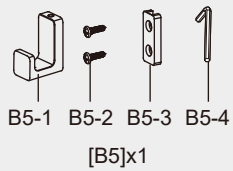

10

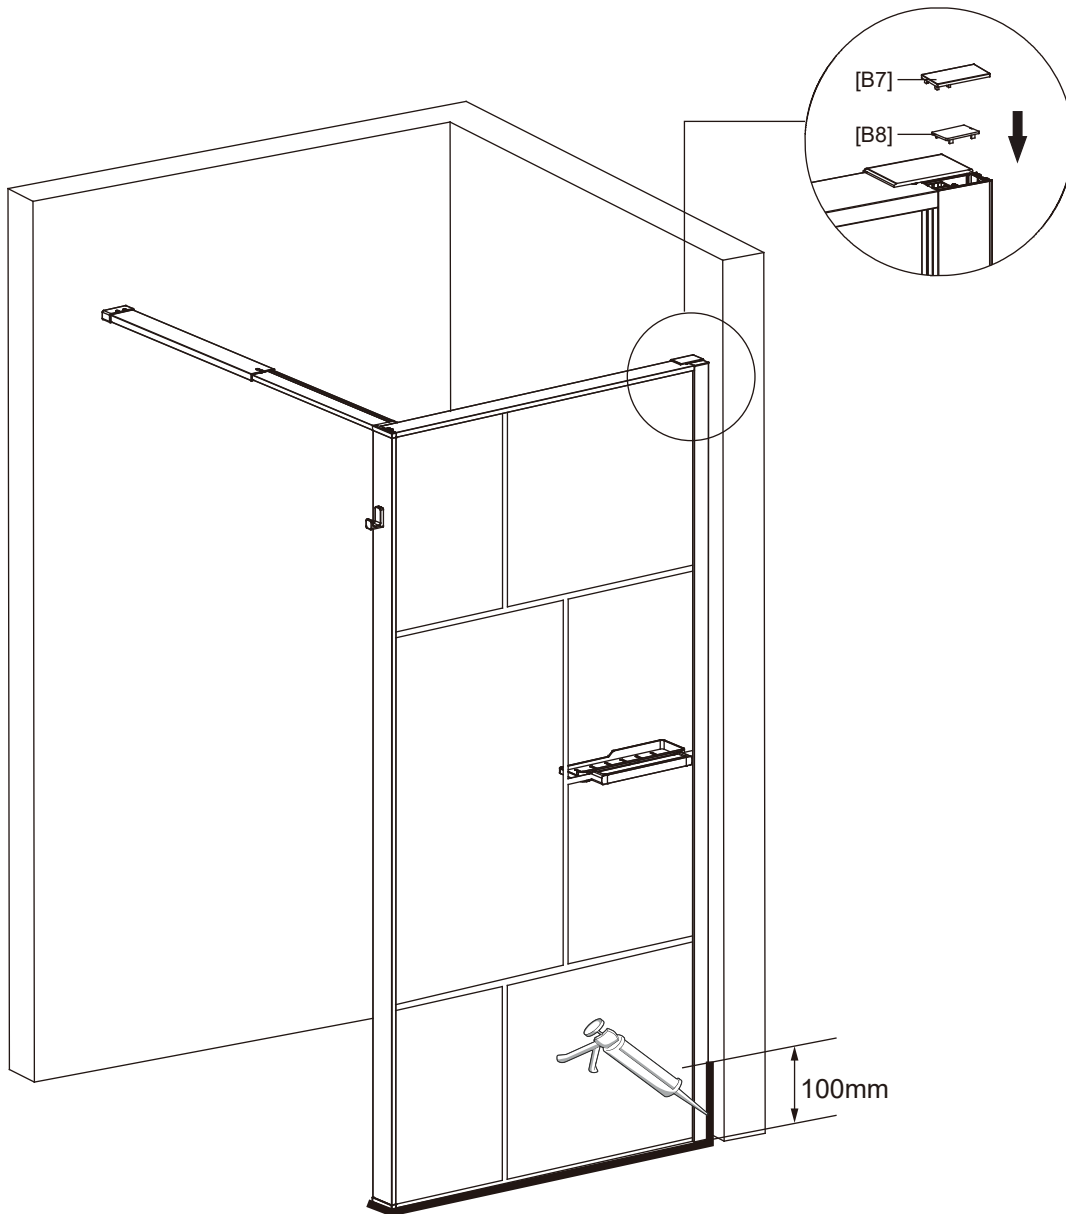

[B8]x1



[B7]x1

