





**Predpriprava mesta za sifon in montažo za vgradnjo CANARY, VALS na tla**  
**Priprema mjesta za sifon i montažu za ugradnju CANARY, VALS na pod**

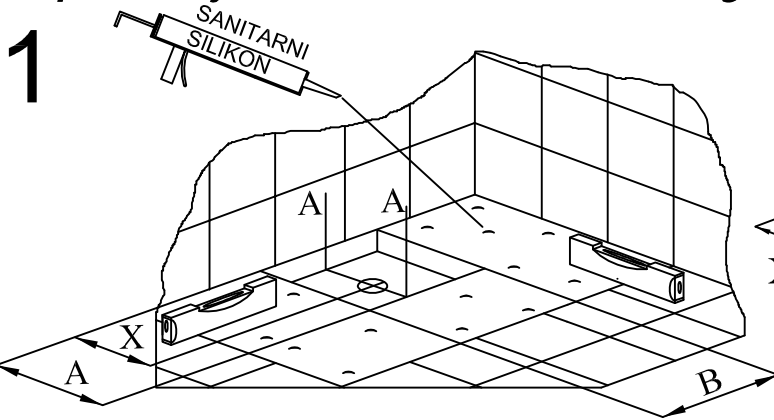



CANARY 90X75, 100X80, 120X80, 120X90, 140X90

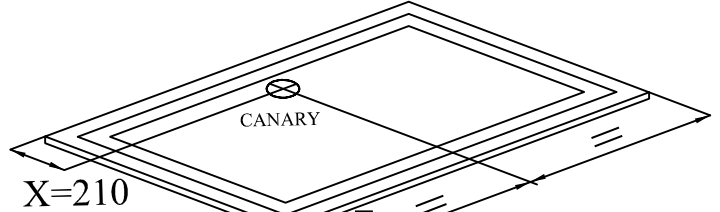


VALS 120X80, 120X90

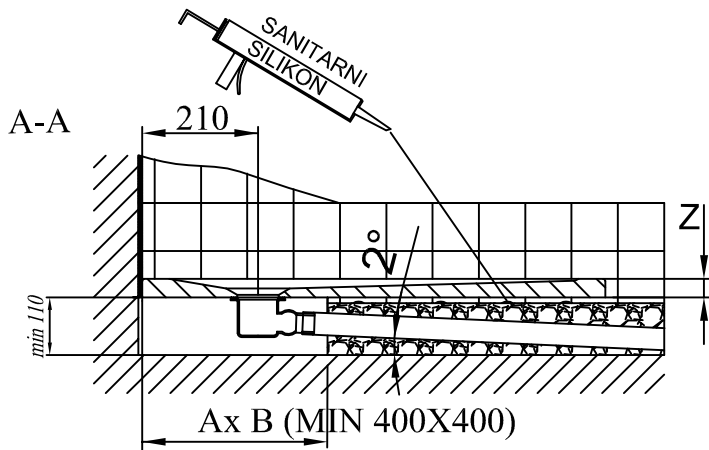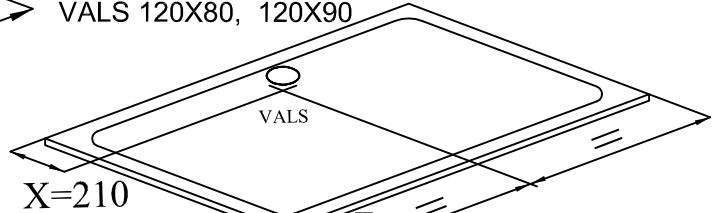


tuš kad  
tuš kada

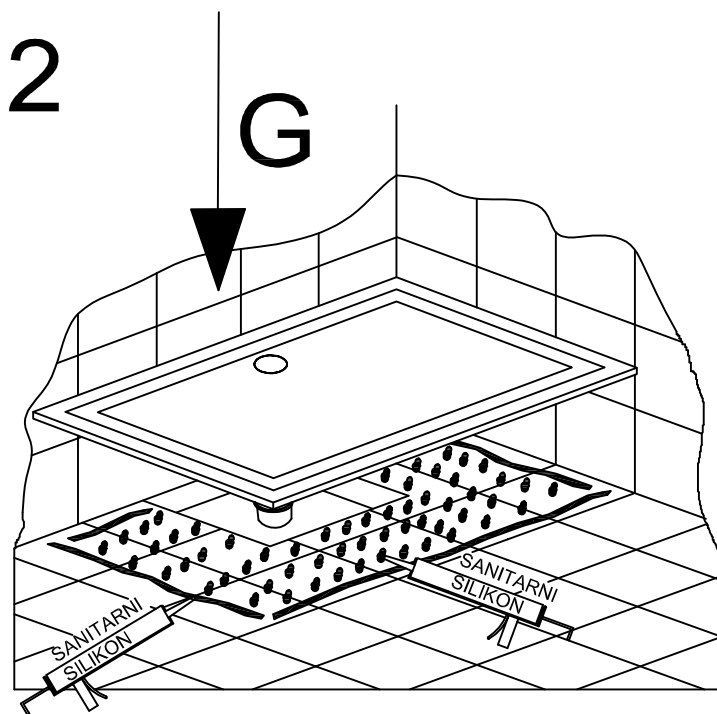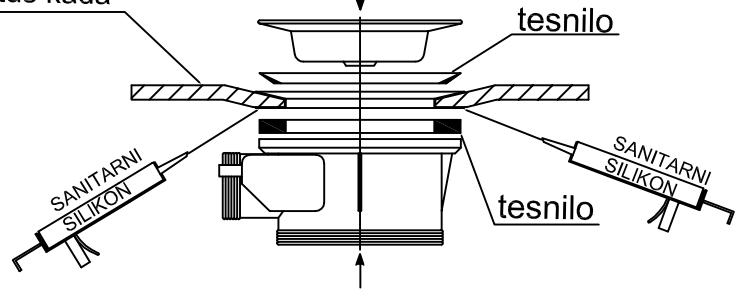


**3**

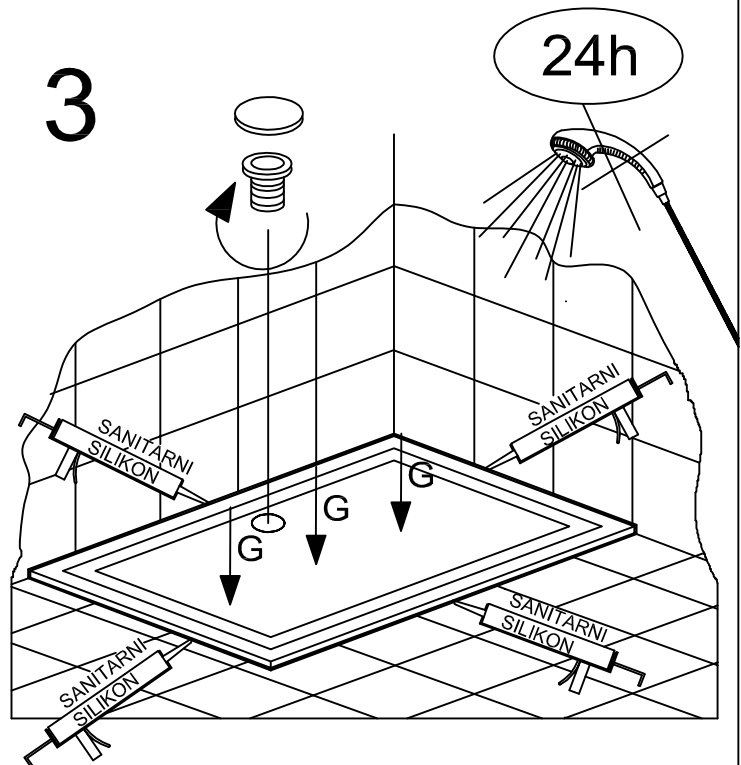


1. Demontaža obloge  
Demontaža obloge

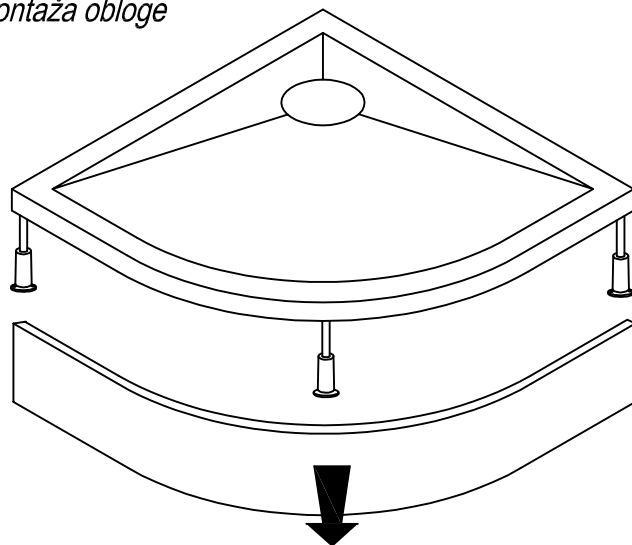





2. Nivelacija  
Niveliranje





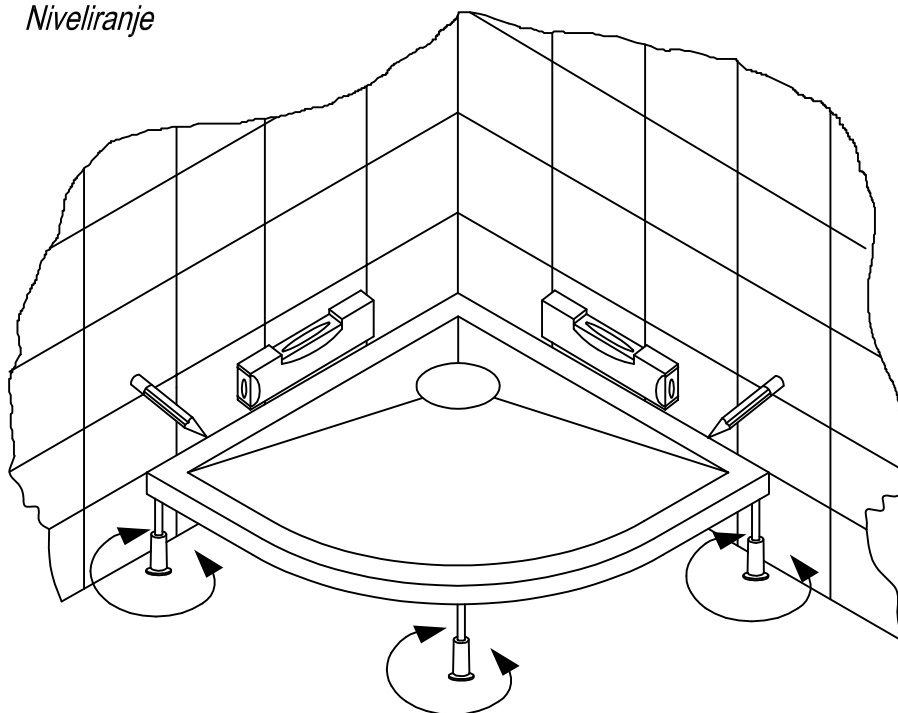


3. MONTAŽA SIFONA  
MONTAŽA SIFONA

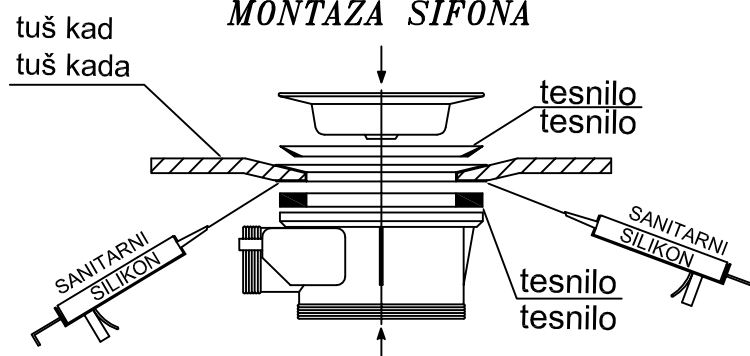

4. Montaža obloge in silikoniziranje  
 Montaža obloge i silikoniziranje

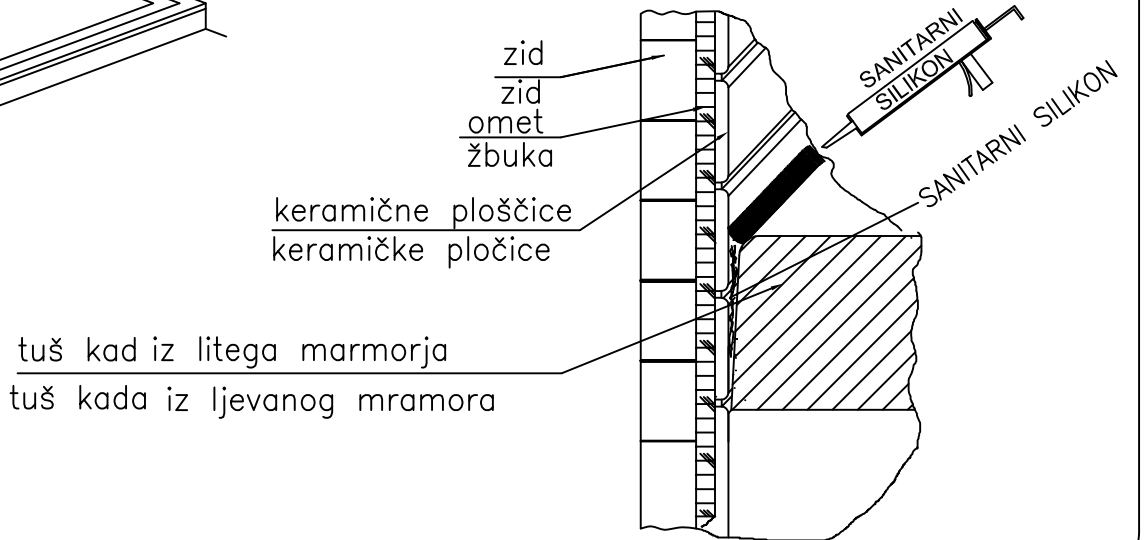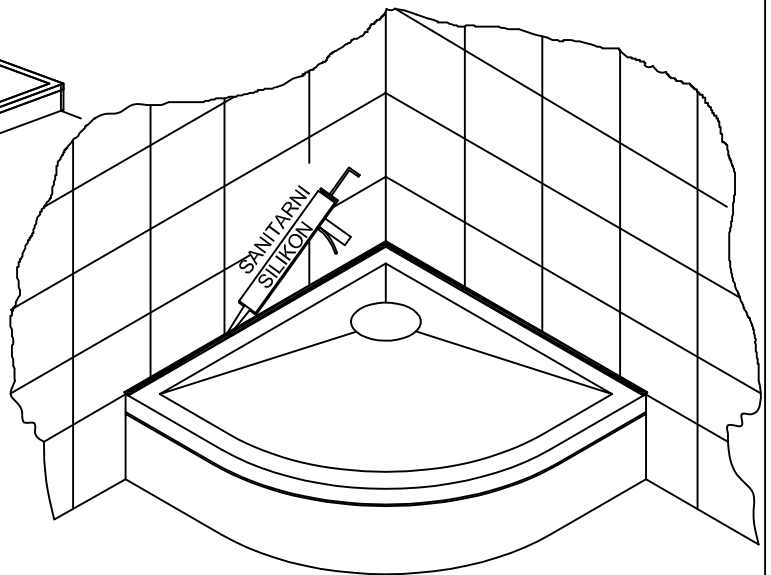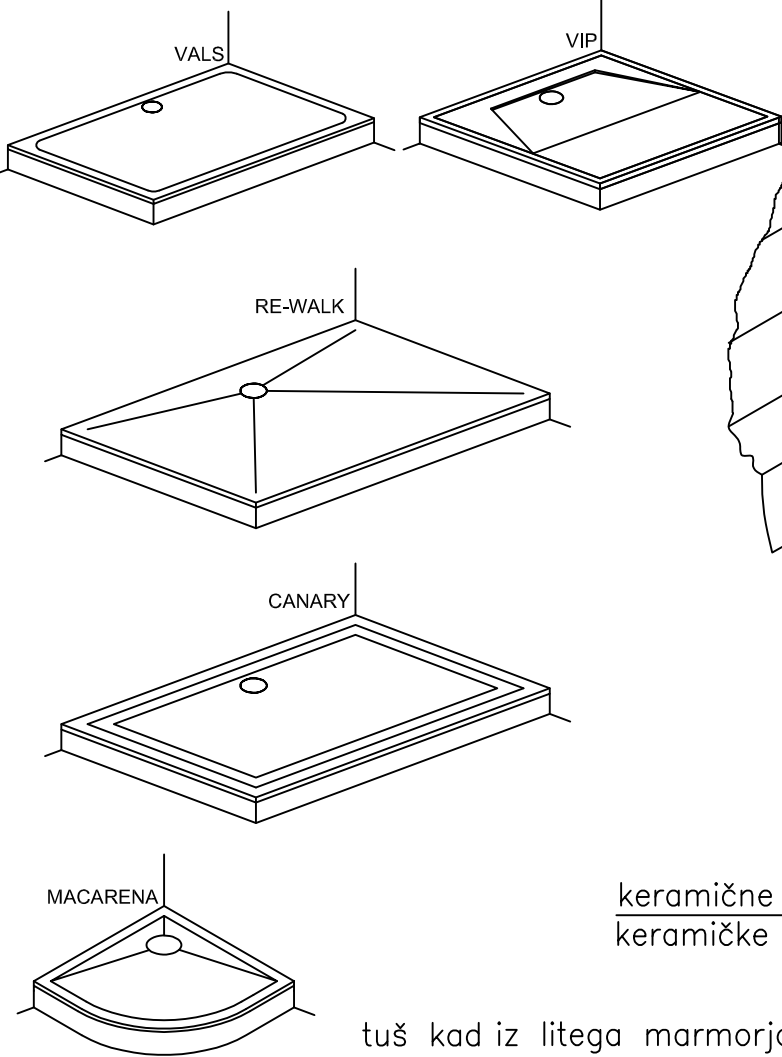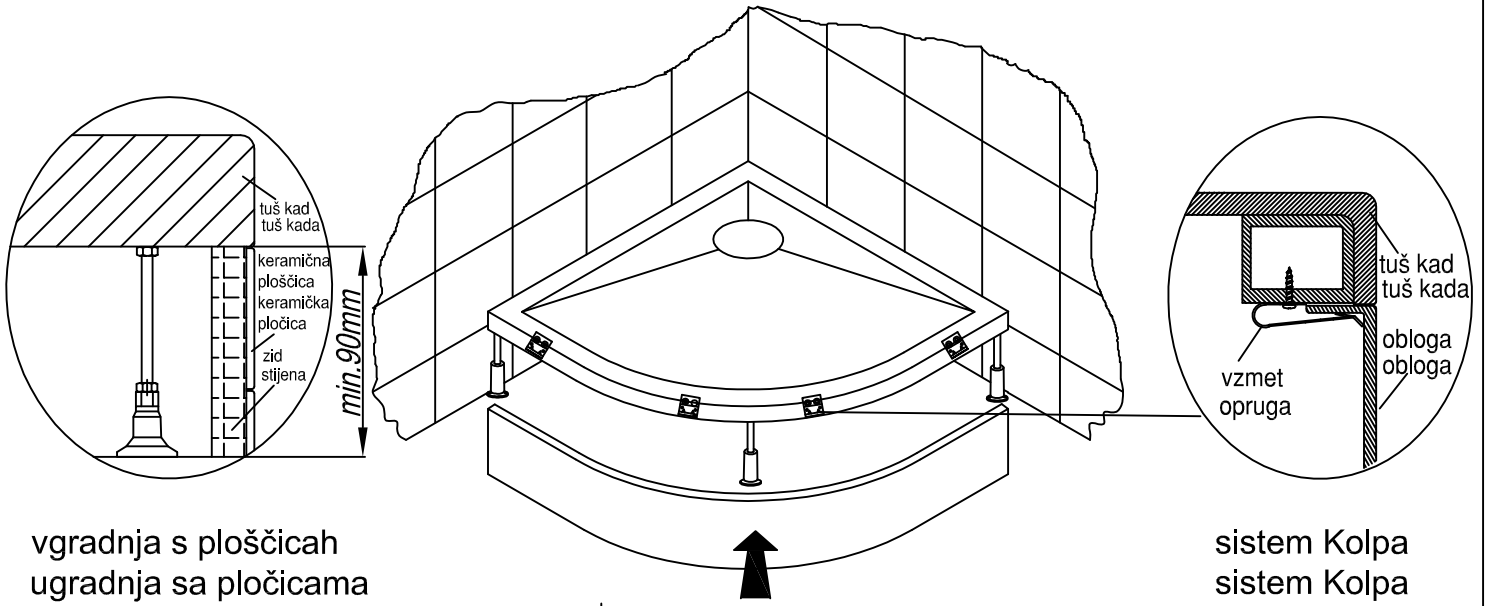

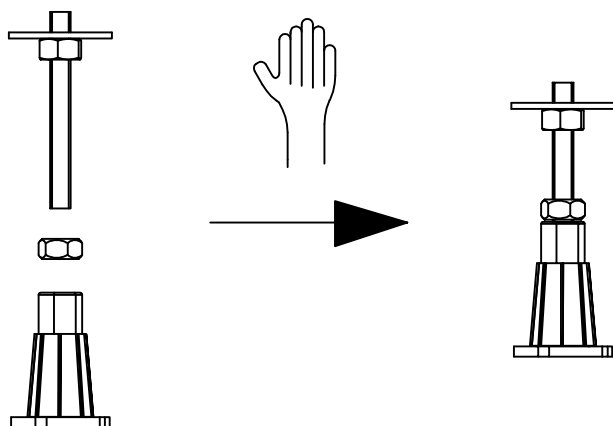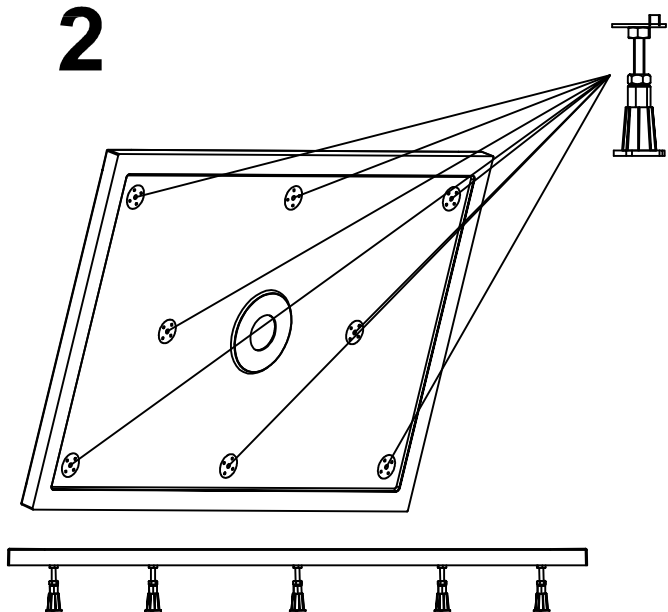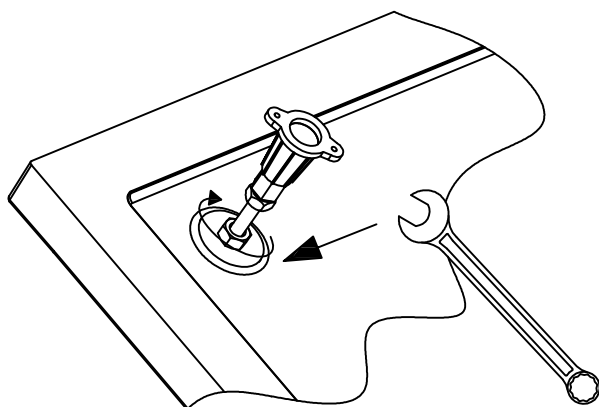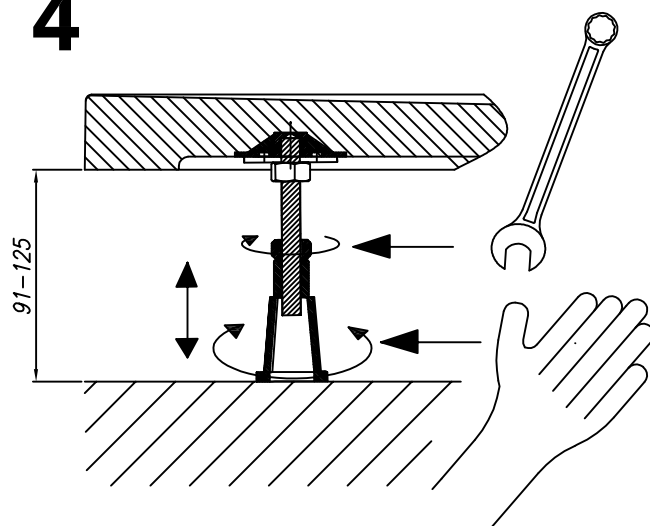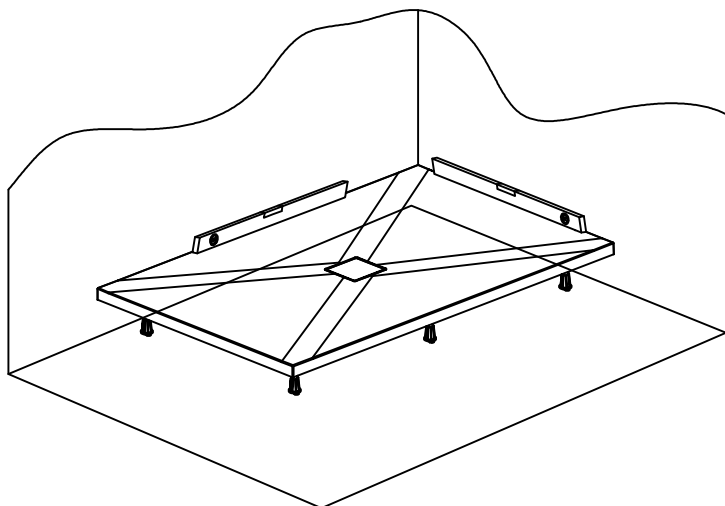**1****2****3****4****5****6**